



Stroke Applicator

4014 / 4016

Made in Germany

Family	Type
Stroke applicator	4014...-200
	4014...-300
	4014...-400
	4016...-200
	4016...-300
	4016...-400

Edition: 06/2017 - Part No. 9009194

Copyright

This documentation as well as translation hereof are property of cab Produkttechnik GmbH & Co. KG.

The replication, conversion, duplication or divulgement of the whole manual or parts of it for other intentions than its original intended purpose demand the previous written authorization by cab.

Editor

Regarding questions or comments please contact cab Produkttechnik GmbH & Co. KG.

Topicality

Due to the constant further development of our products discrepancies between documentation and product can occur.

Please check www.cab.de for the latest update.

Terms and conditions

Deliveries and performances are effected under the General conditions of sale of cab.

Germany

cab Produkttechnik
GmbH & Co KG
Postfach 1904
D-76007 Karlsruhe
Wilhelm-Schickard-Str. 14
D-76131 Karlsruhe

Telefon +49 721 6626-0
Telefax +49 721 6626-249

www.cab.de
info@cab.de

France

cab technologies s.a.r.l.
F-67350 Niedermodern
Téléphone +33 388 722 501

www.cab.de/fr
info.fr@cab.de

USA

cab Technology Inc.
Tyngsboro MA, 01879
Phone +1 978 649 0293

www.cab.de/us
info.us@cab.de

Asia 亚洲

cab Technology Co., Ltd.
希愛比科技股份有限公司
Junghe, Taipei, Taiwan
Phone +886 2 8227 3966

www.cab.de/tw
info.asia@cab.de

China 中国

cab (Shanghai) Trading Co., Ltd.
鉅博(上海)貿易有限公司
Phone +86 21 6236-3161

www.cab.de/cn
info.cn@cab.de

Representatives in other countries on request

Table of Contents

1	Introduction	5
1.1	Instructions	5
1.2	Intended Use	5
1.3	Safety Instructions	5
1.4	Safety Markings	6
1.5	Environment	6
2	Product Description	7
2.1	Important Features	7
2.2	Technical Data	7
2.3	Overview without Cover	8
2.4	Contents of Delivery	10
2.5	Pads	11
2.5.1	Universal Pads	11
2.5.2	Roll-on Pad 4100	11
2.5.3	Blow Pad 4014L/R-21xx	11
2.5.4	Corner-wrap Pad 4014L/R-5100	11
3	Operation	12
3.1	Standard Operation	12
3.2	Cleaning	12
4	Error Messages	14
4.1	Error Messages of the Printer	14
4.2	Error Messages of the Applicator	14
5	Licences	15
5.1	Declaration of Incorporation	15
5.2	EU Declaration of Conformity	16
6	Installation	17
6.1	Factory default Settings	17
6.2	Tools	18
6.3	Mounting and Dismounting the Cover	18
6.4	Mounting the Applicator to the Printer	19
6.5	Transportation Lock	19
6.6	Mounting the Pad	20
6.7	Piercing the Universal Pad Sliding Foil	20
6.8	Preparing the Applicator for the Spring Mounted Pad 401x-4x00	21
6.9	Mounting the Blow Tube	21
6.10	Compressed Air Connection	22
7	Adjustments	23
7.1	Pad Adjustments	23
7.2	Vacuum Adjustments	24
7.3	Adjusting the Blow Tube (Supporting Air)	25
7.4	Adjustment of the Stopper for Blow on Mode	27
7.5	Lifting Speed of Cylinder Z	28
7.6	Sensors on Cylinder Z	29
7.7	End Position Cushioning	30
7.8	Adjusting the Options for Z-Direction Movement	30
7.9	Labeling from below - Changing the Spring of the Impact Sensor	31
8	Configuration	32
8.1	Method for Changing the Printer Setup	32
8.2	Quick Mode for Setting the Delay Times	32
8.3	Configuration Parameters of the Applicator	33
8.4	Setting the Peel Position	34
8.5	Activation of Peel-off Mode	34

9	Test Operation	35
9.1	Test Mode without a Print Job	35
9.2	Test Mode with Print Job	35
10	Spare Parts	36
10.1	Retainer Assembly	36
10.2	Pneumatics Retainer Assembly	37
10.3	Electronics Retainer Assembly.....	38
10.4	Guiding Cylinder Assembly	39
10.5	Cylinder Assembly Z	40
11	Drawings	41
11.1	Block Diagram Type 4014/4016	41
11.2	Pneumatic Drawing Type 4014/4016	42
11.3	Label Position Type 4014 L/4016 L.....	43
11.4	Label Position Type 4014 R/4016 R.....	44
12	Index.....	45

1 Introduction

1.1 Instructions

Important information and instructions in this documentation are designated as follows:



Danger!

Draws attention to an exceptionally great, imminent danger to your health or life due to hazardous voltages.



Danger!

Draws attention to a danger with high risk which, if not avoided, may result in death or serious injury.



Warning!

Draws attention to a danger with medium risk which, if not avoided, may result in death or serious injury.



Caution!

Draws attention to a danger with low risk which, if not avoided, may result in minor or moderate injury.



Attention!

Draws attention to potential risks of property damage or loss of quality.



Note!

Advice to make work routine easier or on important steps to be carried out.



Environment!

Gives you tips on protecting the environment.



Handling instruction



Reference to section, position, illustration number or document.



Option (accessories, peripheral equipment, special fittings).

Time Information in the display.

1.2 Intended Use

- The device is manufactured in accordance with the current technological status and the recognized safety rules. However, danger to life and limb of the user or third parties and/or damage to the device and other tangible assets can arise during use.
- The device may only be used for its intended purpose and if it is in perfect working order, and it must be used with regard to safety and dangers as stated in the operating manual.
- The device applicator mounted on a cab printer of the Hermes+ series is intended exclusively for applying suitable materials that have been approved by the manufacturer. Any other use or use going beyond this shall be regarded as improper use. The manufacturer/supplier shall not be liable for damage resulting from unauthorized use; the user shall bear the risk alone.
- Usage for the intended purpose also includes complying with the operating manual, including the manufacturer's maintenance recommendations and specifications.



Note!

The complete and current version of the documentation can be found in the Internet.

1.3 Safety Instructions



Attention!

Initiation, adjustments and changing of parts are to be performed by qualified service personnel only.




Warning!

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- Before mounting the delivered components disconnect the printer from the power supply and close the shutoff valve of the applicator.
- Only connect the device to other devices which have a protective low voltage.
- Switch off all affected devices (computer, printer, accessories) before connecting or disconnecting.
- In operation, moving parts are easily accessible.
This applies especially for the zone, where the pad is moved between the starting and the labelling position.
During operation do not reach into that zone and keep long hair, loose clothes, and jewelry away. Before any alterations are undertaken in those areas, close the compressed air shutoff valve.
- The device may only be used in a dry environment, do not expose it to moisture (water splashes, sprays and mist)
- Do not use the device in an explosive atmosphere.
- Do not use the device close to high-voltage power lines.
- Perform only those actions described in this service manual.
Work going beyond this may only be performed by trained personnel or service technicians.
- Unauthorized interference with electronic modules or their software can cause malfunctions.
- Other unauthorized work on, or modifications to the device can also endanger operational safety.
- Always have service work done by a qualified workshop, where the personnel have the technical knowledge and tools required to do the necessary work.
- There are various warning stickers on the device. They draw your attention to danger. Warning stickers may therefore not be removed.

1.4 Safety Markings

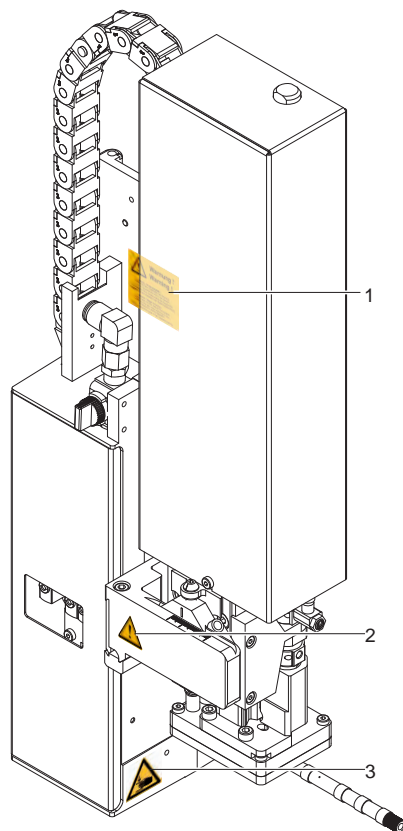

1:



Risk of injury by moving parts!

2:



The cylinder is under pressure
also if the printer is switched off.
Possibility of residual energy!

3:



Danger of crushing hands and
fingers by the moving pad!



Attention!

Never remove or cover safety markings!
Replace it in case of damage!

Fig. 1 Safety markings

1.5 Environment



Obsolete devices contain valuable recyclable materials that should be sent for recycling.

- Send to suitable collection points, separately from residual waste.

The modular construction of the print module enables it to be easily disassembled into its component parts.

- Send the parts for recycling.

2.1 Important Features

- The supporting air and the vacuum as well as the speed of the cylinder are adjustable. That way the applicator can be adapted to different label materials and sizes.
- To avoid contamination within the vacuum channels they are cleaned by air pressure pulses at the end of each application.
- For operation within a system the I/O interface of the printer can be used.

2.2 Technical Data

Type 4014/4016					
Label transfer method		Tamp pad	Universal pad	Spring loaded tamp pad	Spring loaded universal pad
		4014/16 L/R 11F	4014/16 L/R 1100	4014/16 L/R 31F	4014/16 L/R 3100
Label width in mm for Hermes+4		20 - 114	75 - 90	80 - 114	116 / 116
for Hermes+6		50 - 174	-	80 - 174	-
Label height in mm		20 - 210	60 - 90	80 - 210	102/152
Compressed air pressure		0.45 MPa (4.5 bar)			
Sound pressure level		under 74 dB(A)			
Product during labeling	fixed	■	■	■	■
	in motion	-	-	-	-
Labeling onto the product	from the top	■	■	■	■
	from below	■	■	■	■
	sideways	■	■	■	■
Product height	variable	■	■	■	■
Product distance to lower edge at cylinder stroke	200 mm up to mm	135	135	130	130
	300 mm up to mm	235	235	230	230
	400 mm up to mm	335	335	330	330
Immersion depth pad F ²⁾ up to mm		120	-	100	-
Cycle time about frequency/min. ¹⁾		30	30	25	25

Type 4014 / 4016				
Label transfer method		Blow pad	Roll-on pad	Corner pad
		4014/16 L/R 2100	4014/16 L/R 4100	4014/16 L/R 5100
Label width in mm for Hermes+4		20 - 114	25 - 114	20 - 114
for Hermes+6		-	50 - 174	-
Label height in mm		20 - 100	80 - 250	60 - 210
Compressed air pressure		0.45 MPa (4.5 bar)		
Sound pressure level		under 74 dB(A)		
Product during labeling	fixed	■	-	■
	in motion	■	■	-
Labeling onto the product	from the top	■	■	■
	from below	■	■	-
	sideways	■	■	-
Product height	variable	-	■	■
Product distance to lower edge at cylinder stroke	200 mm up to mm	140	160	100 ³⁾
	300 mm up to mm	240	260	200 ³⁾
	400 mm up to mm	340	360	300 ³⁾
Cycle time about frequency/min. ¹⁾		25	20	20

Table 1 Technical Data

¹⁾ Determined at 100 mm stroke below device / smallest label height / print speed 100 mm/s.

²⁾ Immersion depth at applicator >25 mm, the cover of the Hermes+ must be modified.

³⁾ Depending on label height and division

2.3 Overview without Cover

Front View

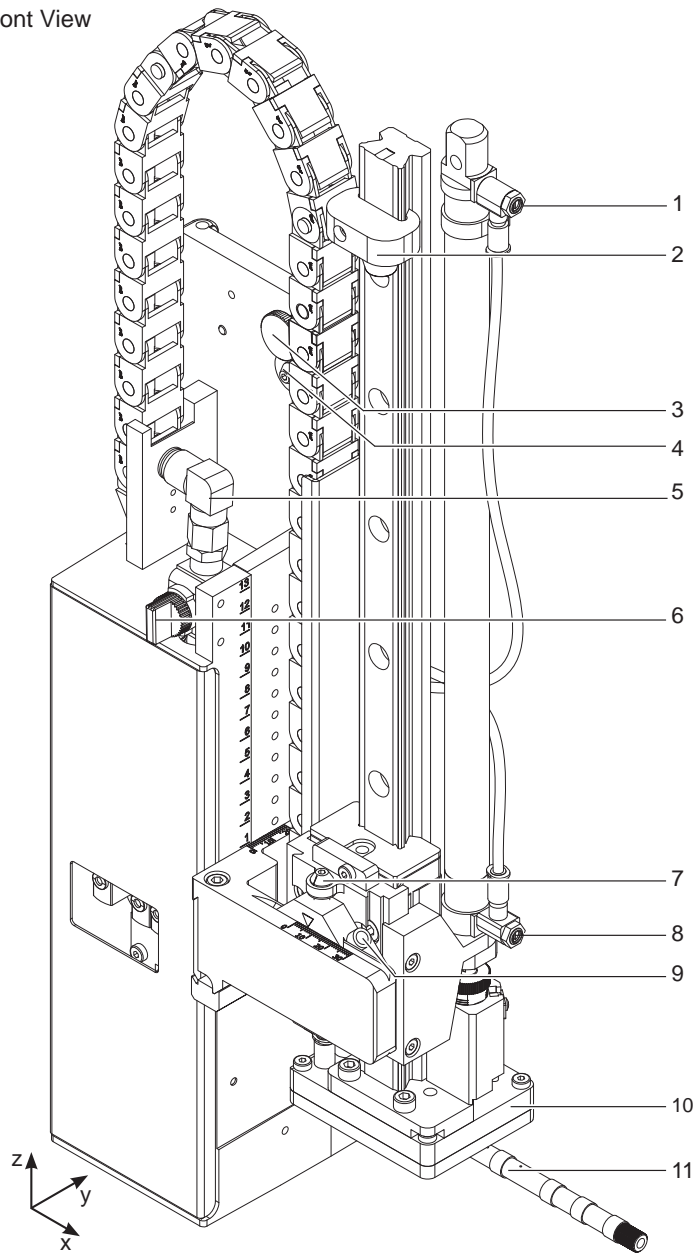


Fig. 2 Overview - Front View

Throttle valves vacuum/support air

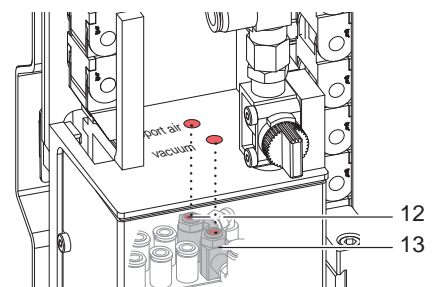


Fig. 3 Throttle Valve Vacuum and Support Air

- 1 Throttle valve cylinder - move in Z-direction
- 2 Stopper for the operation mode "Blow on", transport lock
- 3 Knurled screw for attaching the applicator on the printer
- 4 Setting screw to adjust the angle between applicator and printer
- 5 Compressed air connector
- 6 Shutoff valve
- 7 Setting screw for vertical adjustment cylinder assembly

- 8 Throttle valve cylinder - move out Z-direction
- 9 Screw to fix the vertical pad position
- 10 Pad (customized)
- 11 Blow tube for supporting air
- 12 Support air throttle valve
- 13 Vacuum throttle valve

Rear View

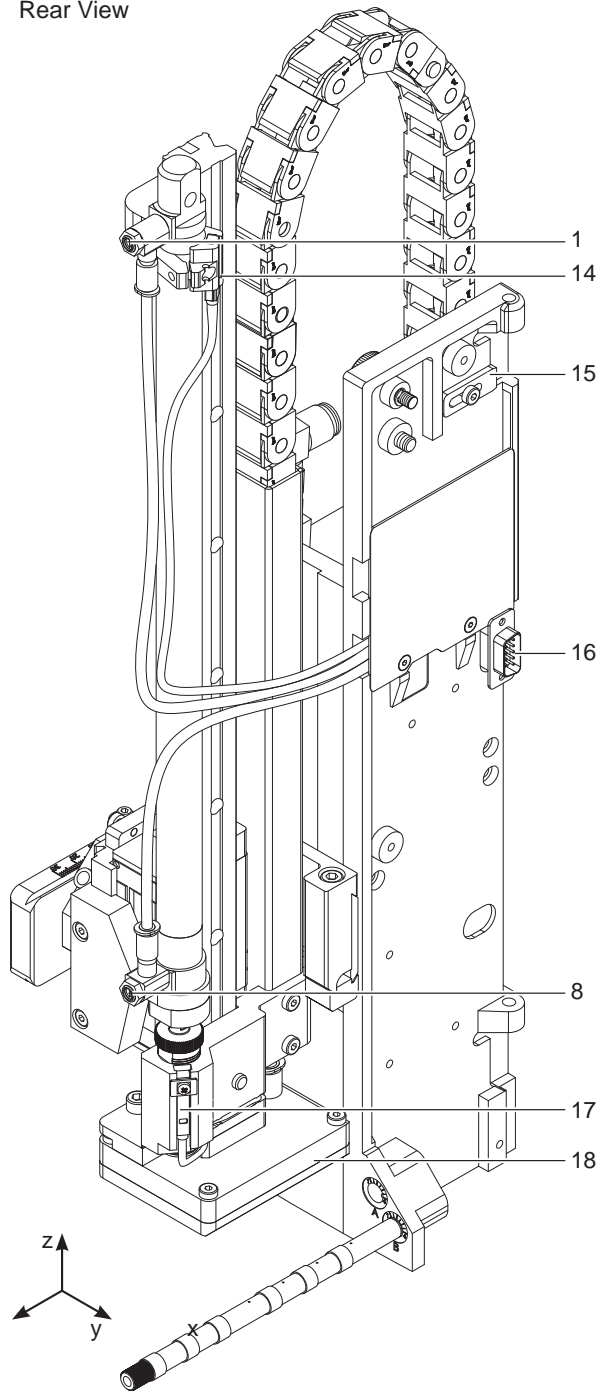


Fig. 4 Overview - Rear View

- 1 Throttle valve cylinder - move in Z-direction
- 8 Throttle valve cylinder - move out Z-direction
- 14 Sensor "Start Position"
- 15 Locking for hinges
- 16 Interface to the printer
- 17 Sensor labeling position
- 18 Pad - customized


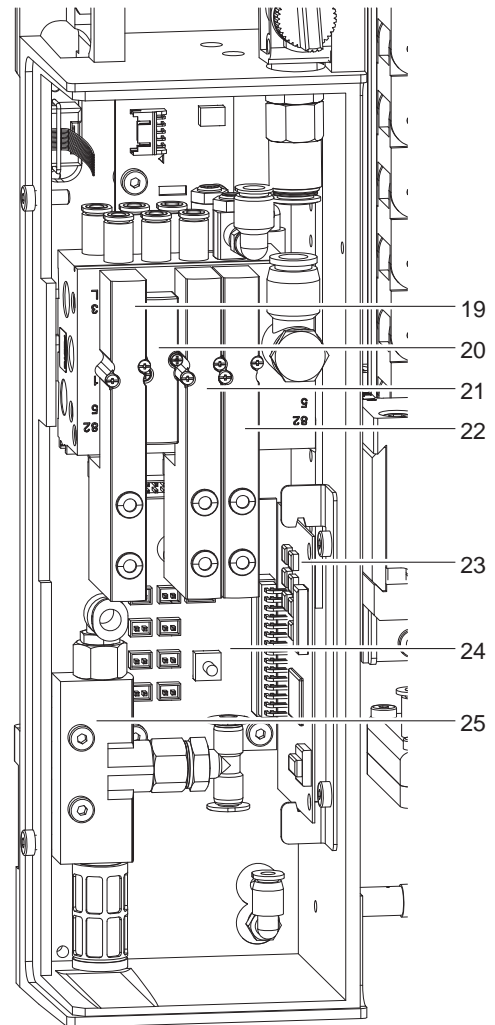


Fig. 5 Overview - Control System

- 19 Valve Cylinder Z
- 20 Cover plate
- 21 Valve Blow air
- 22 Valve Vacuum and Support air
- 23 PCB Applicator Control
- 24 PCB Applicator Interfaces
- 25 Vacuum Generator

2.4 Contents of Delivery

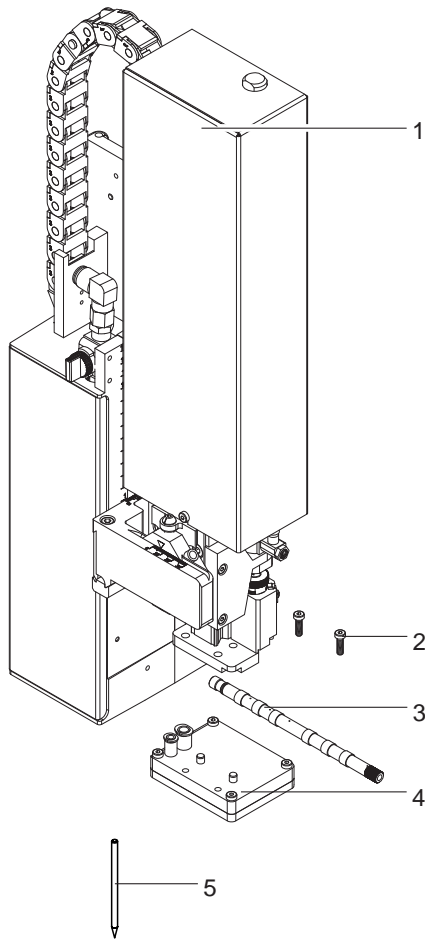

- Applicator (1)
- Screws as part of the pad (2)
- Blow tube - as ordered (3)
- Pad - as ordered (4)
- Pen to make holes (5)
(only for universal pads)
- Documentation

Fig. 6 Contents of delivery



Note!

Please keep the original packaging in case the applicator must be returned.



Attention!

The device as well as the printing materials will be damaged by moisture and wetness.

- Set up label printer with applicator only in dry locations protected from moisture and splashes.

2.5 Pads

2.5.1 Universal Pads

Universal Pad 4014L/R-1100

Standard size : 70x60, 90x90

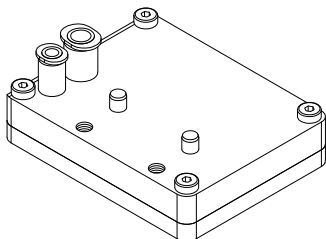


Fig. 7 Universal pad 70x60

Universal pads are available in different standard sizes.

According to the size of the label the holes may be pierced into the tamp by the customer. For that purpose a piercing pin has been included in the delivery contents.

Customized tamp sizes for specific label sizes are available on request.

Spring-mounted Universal Pad 4014L/R-3100

Standard size : 116x102, 116x152

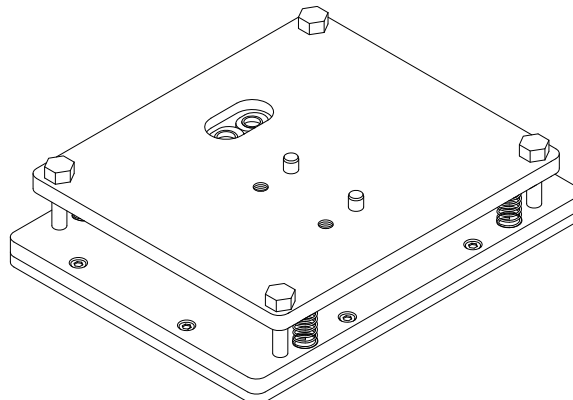


Fig. 8 Spring-mounted universal pad 116x152

2.5.2 Roll-on Pad 4100

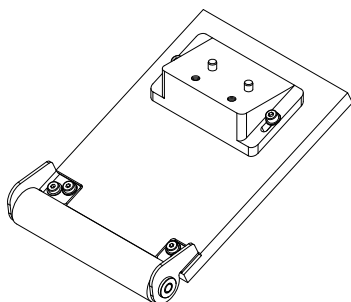


Fig. 9 Roll-on pad

Roll-on pads are only produced on request and are customized to suit label sizes.

2.5.3 Blow Pad 4014L/R-21xx

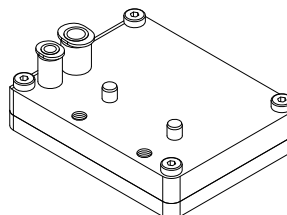


Fig. 10 Blow pad

Blow pads are only produced on request and are customized to suit label sizes.

2.5.4 Corner-wrap Pad 4014L/R-5100

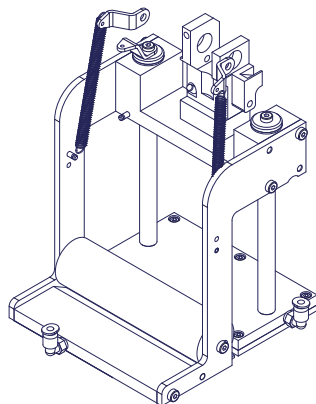


Fig. 11 Corner pad

Corner pads are only produced on request and are customized to suit label sizes.

3.1 Standard Operation

- ▶ Check all external connections.
- ▶ Load the material.
- ▶ Open the shutoff valve.



Attention!

- ▶ Ensure that the pad is not covered by a label when switching on the printer-applicator system. Otherwise the vacuum sensor may be calibrated incorrectly.

- ▶ Switch on the printer.



Note!

If the pad is not in the starting position when the printer is switched on an error message will appear on the display.

Press pause button on the printer.

The applicator will move into the start position and is ready for work.

- ▶ Press the **feed** button on the printer.
A synchronization feed is initiated. The processed labels have to be removed manually. After a few seconds the printer carries out a short backfeed to position the front edge of the next label at the printing line.



Note!

This synchronization also has to be carried out when the print job has been interrupted with the cancel button.

Synchronizing is not necessary when the print head was not lifted between print jobs. This also applies if the printer was powered off between print jobs.

- ▶ Start a print job.
- ▶ Start the labelling process via PLC interface.


Error messages during labelling process are shown in the display of the printer ▷ Error Messages.

3.2 Cleaning



Attention!

Never use solvents and abrasives.

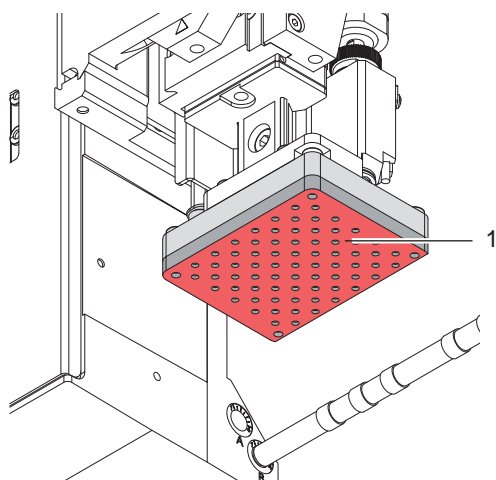

- ▶ Clean the outside surfaces with multi purpose cleaner.
- ▶ Remove dust particles and leftover label pieces with a soft brush and/or vacuum cleaner.
- ▶ The slide foil (1) requires regular cleaning as most of the dirt will accumulate here.

Fig. 12 Cleaning the pad

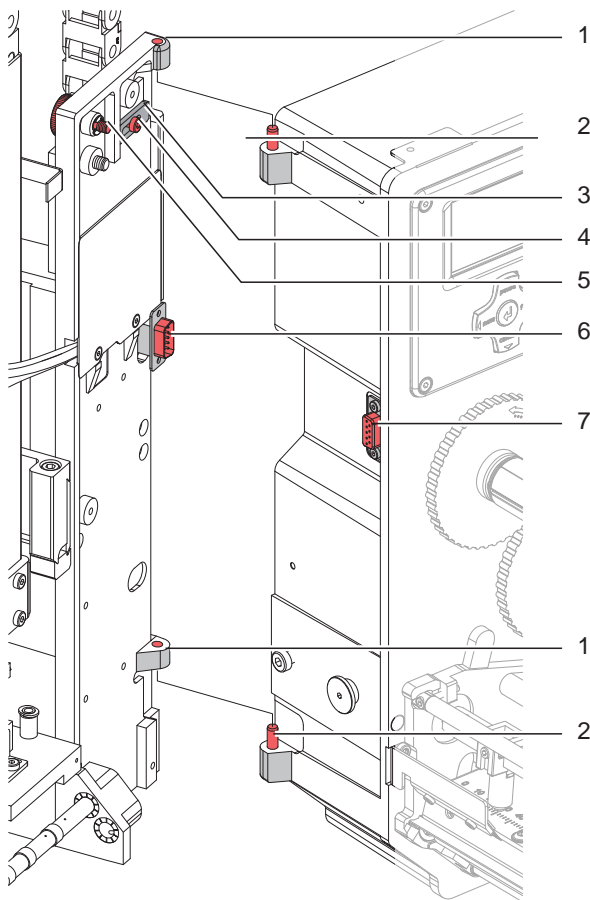


Fig. 13 Mounting the applicator to the printer



Attention!

Initiation, adjustments and changing of parts is to be performed by qualified service personnel only.

▷ **Service Manual of the Applicator**



Attention!

- ▶ **Disconnect the printer from the power supply before mounting the applicator!**
- ▶ **Ensure the printer is in a stable position!**
- ▶ **Connect the compressed air only after mounting the applicator to the printer!**

To clean the applicator and printer it is sometimes necessary to turn away or even dismount the applicator from the printer.

Take care not to adjust the setting screws, throttle valves or other alignment elements. This will enable use of the applicator directly after cleaning.

Pivot Away/Dismount the Applicator

1. Loosen thumbscrew (5) and pivot the applicator aside.
2. Disconnect SUB-D 15 male connector (6) from the female connector (7) of the printer.
3. Loosen screw (4) and remove the locking plate (3) from the hinges.
4. Lift the applicator from the hinges.

Mount the Applicator

5. With the female parts (1) of hinges hang the applicator on the hinges parts (2) of the printer.
6. Connect the SUB-D 15 male connector (6) to the female connector (7) of the printer.
7. To secure the applicator against slipping out of hinges, loosen screw (4), move metal part (3) under the hinge and tighten screw (4).
8. Swing the applicator to the printer and tighten the thumbscrew (5).

4.1 Error Messages of the Printer

For detailed information about printer errors (e.g. 'Paper out', 'Ribbon out', etc.) ▷ Check the operator's manual of the printer.

Error treatment:

- ▶ Clearing the error results.
- ▶ Press the **feed** key to synchronize the label feed, remove the left over labels manually.
- ▶ Press the **pause** key to quit the error state.

After error correction, the label causing the error will be reprinted.

4.2 Error Messages of the Applicator

The following table contains an overview of applicator specific error messages and their possible causes. It also suggests methods to resolve the error states:

Error Message	Possible Cause
Air pressure ins.	Compressed air is switched off
	Pressure too low < 4 bar
	Pressure too high > 6 bar
Label not depos.	Label has not been placed onto the product; after the pad has moved back the label is still sticking to the pad.
Lower position	Pad has not reached the starting position within 2s after the pad has left the labelling position; or pad has left the starting position without authorization.
Process Error	Process of labeling was interrupted via the I/O interface of the printer with the STP signal.
Refl. sensor blk.	There has been no change of state of the upper sensor of the cylinder from the start of the labelling process and the signal of the labelling position sensor.
Upper position	Pad is not in the starting position when the printer was switched on.
	Pad has not reached the labelling position within 2s after the movement of the pad was started.
	Pad has left the printing position without authorization.
Vac. plate empty	Label has not been picked up properly by the pad; or label fell off the pad before it could be placed onto the product.

Table 2 Error messages of the applicator

Error treatment:

- ▶ Clear the error results.
- ▶ Press the **pause** key to quit the error state.



Note!

In the case of errors check the **Service Manual** for adjustments and settings.



Warning!

After the error has been resolved the pad will immediately move back to the starting position!

Danger of injury to hands and fingers by the moving pad!

- ▶ **Do not reach into the area of the moving pad and keep long hair, loose clothes, and jewelry away.**

After error correction, the printing of the label causing the error cannot be repeated without restarting the print job except the error "Vac. plate empty". In this case, the last label will be printed again after resolution via the **pause** key and then pressing the Enter button ↵.

- ▶ In the application mode "Apply/Print" sends the signal "Print first label" or press the button ↵ to send a printed label to the tamp.

5.1 Declaration of Incorporation




Declaration of Incorporation

We declare herewith that the following „partly completed machinery“ as a result of design, construction and the version put in circulation complies with the essential requirements of the **Directive 2006/42/EC on machinery**:

Annex I, Article 1.1.2, 1.1.3, 1.1.5, 1.1.6, 1.2.1, 1.3.2, 1.5.2, 1.5.8, 1.6.3, 1.7

In the event of any alteration which has not been approved by us being made to any device as designated below, this statement shall thereby be made invalid.

Device:	Stroke Applicator
Type:	4014/4016
Applied EU Regulations:	Applied Standards:
Directive 2006/42/EC on machinery:	<ul style="list-style-type: none"> • EN ISO 12100:2010 • EN ISO 13849-1:2008 • EN 60950-1:2006 +A11:2009+A12:2011+A1:2010+A2:2013
Other Relevant Directives:	
<ul style="list-style-type: none"> • Directive 2014/30/EU relating to electromagnetic compatibility • Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment 	
Person authorised to compile the technical file:	Erwin Fascher Am Unterwege 18/20 99610 Sömmerda
Signed for, and on behalf of the Manufacturer:	Sömmerda, 19.06.2017
cab Produkttechnik Sömmerda Gesellschaft für Computer- und Automationsbausteine mbH 99610 Sömmerda	 Erwin Fascher Managing Director

The product must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Directive on machinery.


The documents according annex VII part B from the incomplete machinery are created and will commit to state agencies on request in electronic kinds.

5.2 EU Declaration of Conformity



EU Declaration of Conformity

We declare herewith that the following device as a result of design, construction and the version put in circulation complies with the relevant fundamental regulations of the EU Rules for Safety and Health. In the event of any alteration which has not been approved by us being made to any device as designated below, this statement shall thereby be made invalid.

Device:	Stroke Applicator
Type:	4014/4016
Applied EU Regulations:	Applied Standards:
Directive 2014/30/EU relating to electromagnetic compatibility:	<ul style="list-style-type: none"> • EN 55032:2012 • EN 55024:2010 • EN 61000-6-2:2005
Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment:	<ul style="list-style-type: none"> • EN 50581:2012
Signed for, and on behalf of the Manufacturer:	Sömmerda, 19.06.2017
cab Produkttechnik Sömmerda Gesellschaft für Computer- und Automationsbausteine mbH 99610 Sömmerda	 Erwin Fascher Managing Director

6.1 Factory default Settings

**Note!**

The applicator is set up in a standard configuration by the factory. These values guarantee a reliable operation.

**Note!**

In the case of a customer specific setup with special material the settings can deviate from the standard values.

In this case the standard values in the setup protocol are as follows.

The factory default settings are:

- Connected to a cab Hermes+ printer, vertical
- Used Pad:
cab part No.: 5963881 54x36 for L
cab part No.: 5963878 54x36 for R
- Material used for factory default settings: cab part No.: 5556472 54x35.5
- Pressure value of the compressed air: 0.45 MPa (4.5 bar)

6.2 Tools






Screwdriver with parallel blade	2.5		<ul style="list-style-type: none"> To adjust the throttle valves and product sensor
Hexagon key L-wrench	0.8		<ul style="list-style-type: none"> To adjust the sensors (in contents of delivery)
	2.5		<ul style="list-style-type: none"> For matched norm parts (in contents of delivery)
	4		<ul style="list-style-type: none"> Pad adjustments
Flat-round nose - straight - angled			<ul style="list-style-type: none"> To mount/dismount tubes
Open spanner	SW 8		<ul style="list-style-type: none"> To change the throttle valves
	SW 13		<ul style="list-style-type: none"> Setting the spring power on the adapter bolt
	SW20		<ul style="list-style-type: none"> Changing the cylinder
Manometer	± 7 bar		<ul style="list-style-type: none"> Air pressure control


Table 3 Tools

6.3 Mounting and Dismounting the Cover

To initiate the applicator or for adjustments it is necessary to dismount the cover (2). After these adjustments have been completed remount the cover.

**Warning!**

- ▶ Do not operate the applicator without cover (2).
- ▶ Only dismount the cover when servicing the applicator.

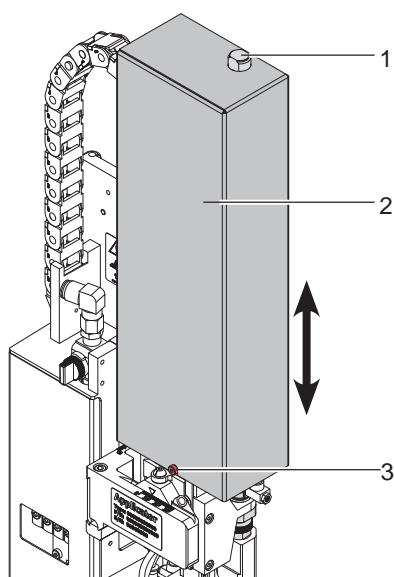**Dismount**

1. Loosen screw (3).
2. Lift off cover (2).

Mount


3. Move the cover (2) over the cylinder assembly.
4. Put in the cylinder (1) through the hole in the cover (2).
5. Tighten screw (3) to fasten the cover (2).

Fig. 14 Cover

6.4 Mounting the Applicator to the Printer

**Attention!**

- ▶ Disconnect the printer from the power supply before mounting the applicator!
- ▶ Ensure the printer is standing in a stable position!
- ▶ Connect the compressed air only after mounting the applicator to the printer!

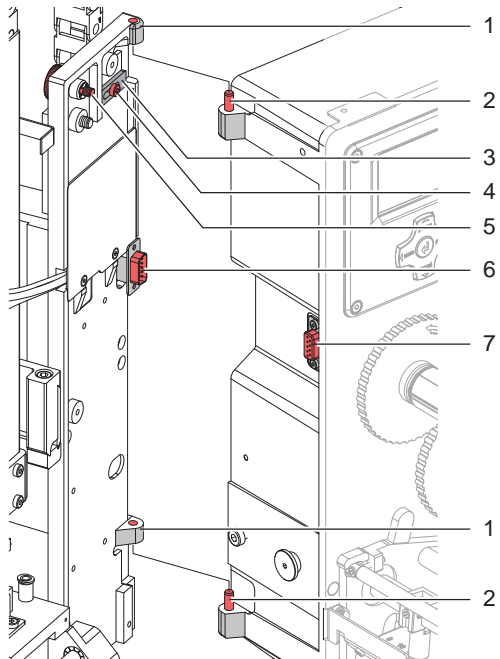

1. Hang the applicator to the printer via the female hinges (1) to the male hinges (2) of the printer.
2. Connect the SUB-D 15 male connector (6) to the female connector (7) of the printer.
3. To ensure the applicator does not slip out of the hinges, loosen screw (4), move the locking plate (3) to secure the applicator and tighten screw (4) again.
4. When pivoting the applicator onto the printer ensure that the cable is not caught between the two units.
5. Tighten the thumbscrew (5).
6. Raise the stopper on the rail to enable movement of the lifting cylinder. ▷ „6.5 Transportation Lock“

Fig. 15 Mounting applicator to the printer

6.5 Transportation Lock

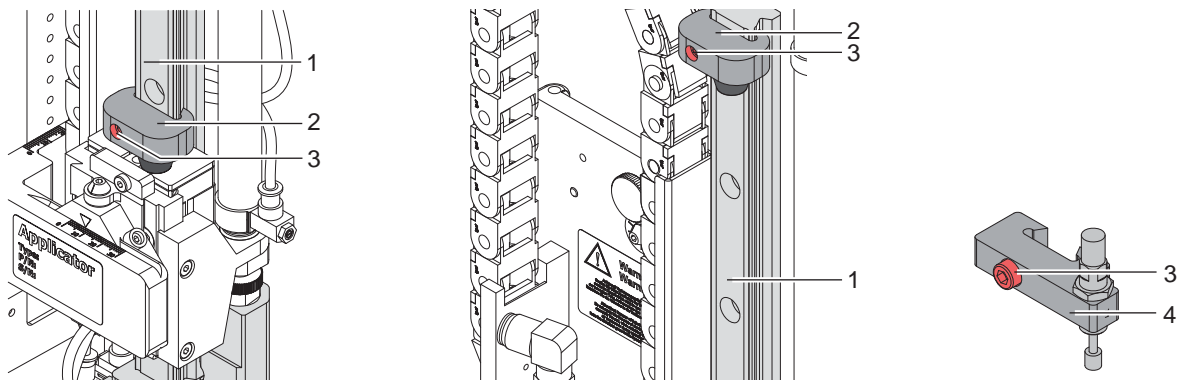


Fig. 16 Stopper as transportation lock

When the applicator is delivered, the stopper (2) is mounted on the rod (1). With this stopper (2) the labelling position for the operation mode "Blow on" can be adjusted. In delivery status the stopper (2) is used as transportation lock.

**Note!**

To reduce the impact energy it is possible to use a stopper with cushioning (4).

Releasing the transportation lock

1. Loosen screw (3) of the stopper (2).
2. Move the stopper (2) along the rod (1) into the position as in operation mode:
 - Operation mode "Blow on": ▷ 7.4 Adjusting the stopper
 - Operation mode "Stamp on" : Move the stopper (2) up to the end of the rod (1).
3. Tighten screw (3) to fix the stopper (2) in position.

6.6 Mounting the Pad

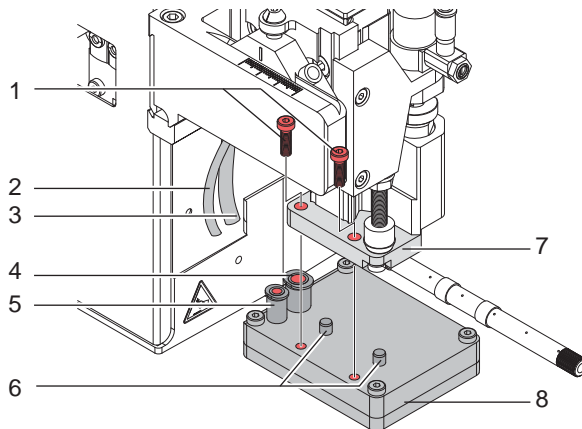


Fig. 17 Mounting the pad

1. Insert the pins (6) of the pad (8) into the holes on the bottom of the pad holder (7).
2. Fix the pad (8) to the pad holder (7) with the screws (1).
3. Insert the vacuum tube (2) and the air blowing tube (3) into their appropriate push-in-fittings (4 & 5) of the pad.



Attention!

- To avoid possible collisions of the pad with other parts of the printer-applicator system, please roughly align the pad in all directions (► „7.1 Pad Adjustments“) before connecting the applicator to the compressed air supply!


6.7 Piercing the Universal Pad Sliding Foil

On the bottom of the pad there are holes for holding the labels in place by vacuum. The universal pad is delivered with these holes are covered by a sliding foil and must be punctured according to used the label size. For that purpose a piercing pin is included in the contents of delivery.



Attention!

Danger of stabbing injuries in case of inappropriate use.

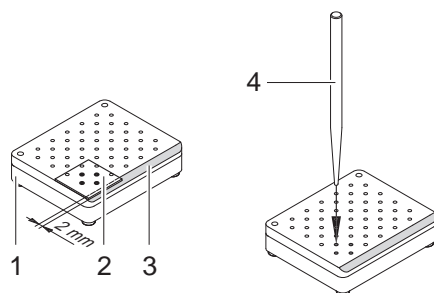

1. Place a label (1) on the bottom of the pad (2). Note the position of the slanted edge (3).
2. Align the label so that it protrudes about 2 mm over the slanted edge.
3. Pierce holes into the sliding foil with the piercing pin (4) that are clearly covered by the label as illustrated. Ensure the holes are free of sliding foil by twisting the piercing pin.

Fig. 18 Piercing the sliding foil of the universal pad



Attention!

Do not pierce holes into the sliding foil which are located less than 1 mm from the label's edge as this will compromise the vacuum's efficiency.

6.8 Preparing the Applicator for the Spring Mounted Pad 401x-4x00




Attention!

Ensure the cylinder assembly does not get damaged or cause injury when loosening screws to perform adjustments.

Depending on the type of pad being used the cylinder assembly can be mounted at different heights.

When delivered, the pad assembly is mounted in the lowest position as this is suited for most pads.

In case of using a larger pad (e.g. 116x102/116x152) with the applicator 4014/4016 it is necessary to change the position of the pads z-direction.

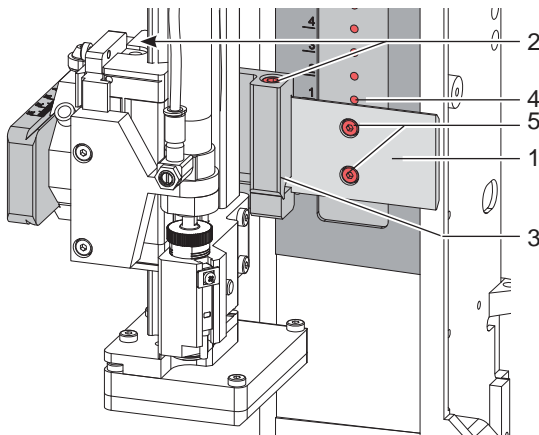

1. Loosen screws (2) and move the pad assembly with the girder (3) along the adapter profile (1) until the screws (5) can be reached.
2. Loosen screws (5).
3. Move pad assembly with adapter profile (1) up one snap point position (4).
4. Fix the cylinder assembly in new position with screws (5).
5. Tighten screws (2).

Fig. 19 Changing the base height of the cylinder unit

6.9 Mounting the Blow Tube

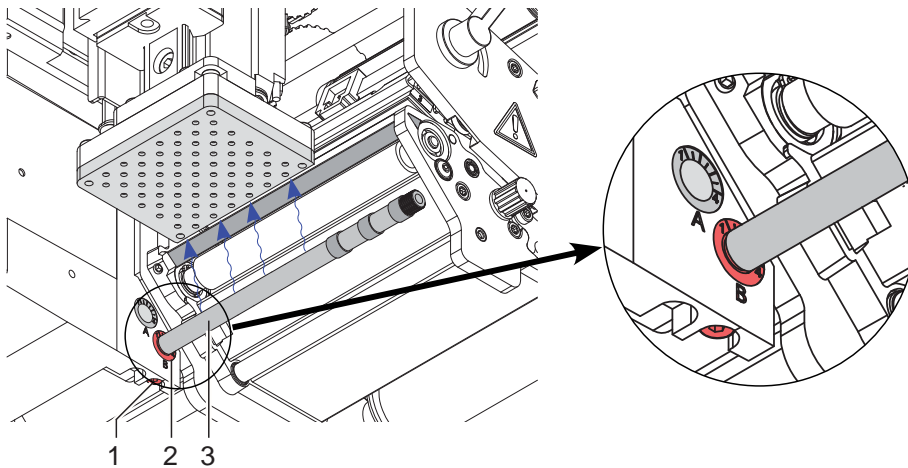


Fig. 20 Mounting the blow tube

It is possible to rotate the blow tube (4) to optimize the direction of the supporting air for the take over procedure of the label from printer to applicator.

1. Loosen screw (1).
2. Place the blow tube (3) into the blow tube hole B (2).
3. Tighten screw (1) lightly to secure the blow tube (3). ▷ „7.3 Blow Tube and Support Air Adjustments“

6.10 Compressed Air Connection



Attention!


Adjustments and functionality control were done with a compressed air value of 4.5 bar.
The applicator's operating range is between 4.0 and 6.0 bar.



Warning!

When connecting the applicator to compressed air it is considered "IN USE!" Cylinder motion is possible!

► Do not reach into the zone of the moving pad and keep long hair, loose clothes, and jewelry away.

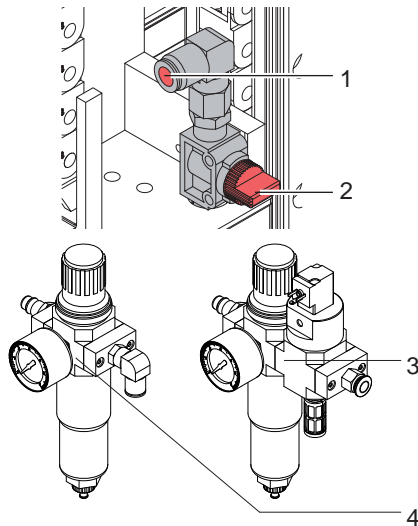

1. Check that the stop valve (2) is closed as illustrated.
2. Attach compressed air to connector (1).
3. Open the stop valve (2) by turning it into the direction of air flow.
4. Switch on the printer via the power switch.

It is possible to use an air pressure regulation unit.

cab offers two versions of air pressure regulators.

- Air pressure regulation unit with included magnetic valve (3)
Controlling via printer
▷ Interface description of the printer
- Standard version (4)

Fig. 21 Compressed air connection



Note!

If the pad is not in the starting position when the printer is switched on an error message will appear on the display.

Press the pause button on the printer to cancel the error state. The applicator will move into the start position and is ready for work.



Note!

Only mount the air pressure regulation unit as illustrated otherwise the functionality of the air-water separator cannot be guaranteed.

7.1 Pad Adjustments

For optimal functionality it is necessary to place the pad exactly over the label for the takeover procedure.

Moving the Pad in X-, Y- and Z-Directions

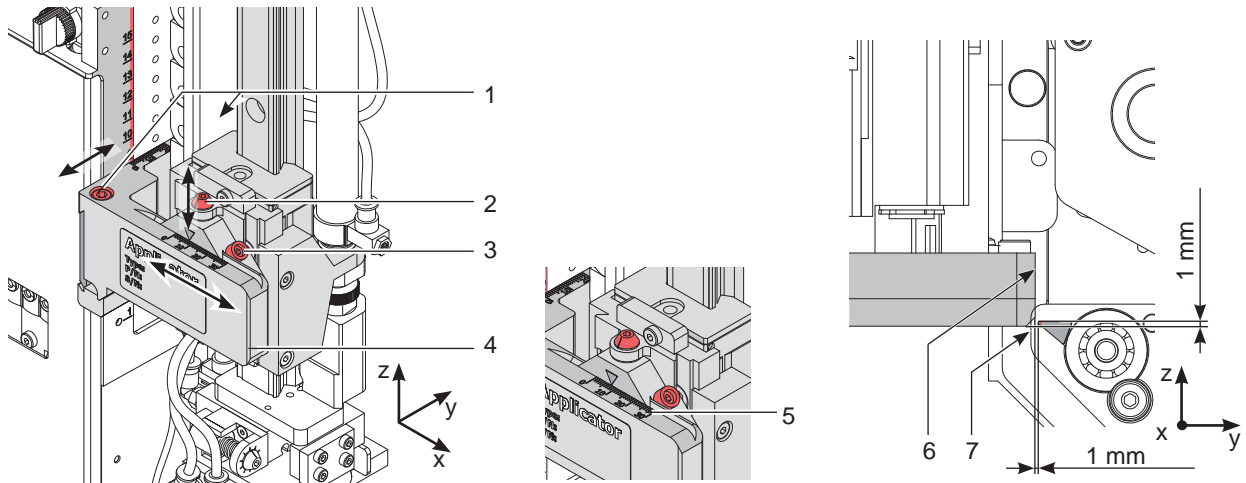


Fig. 22 Moving the pad assembly

Adjustment in the X-direction - Sideways Adjustment

1. Loosen screw (3).
2. Move the cylinder assembly group (4) including pad along the cross beam until the pad is over the middle of the label intended for application. For better orientation there is a graduation mark (5) depicted on the assembly group.
3. Tighten screw (3).

Adjustment in the Y-direction - Print Direction

1. Loosen screws (1).
2. Move cylinder assembly (4) including pad along the guide rail so that the distance between the edge of the pad (6) and the edge of the dispense plate (7) of the printer is approximately 1 mm.
3. Tighten screws (1).

Adjustment in Z-direction - Height Adjustment

1. Loosen screw (3).
2. Turn setting screw (2) so that the bottom of the pad is 1 mm over the top edge of the dispense plate (7).
3. Tighten screw (3).

Adjusting the Parallelism between Pad and Dispense Edge

The edge of the pad must be parallel to the dispense edge of the printer.

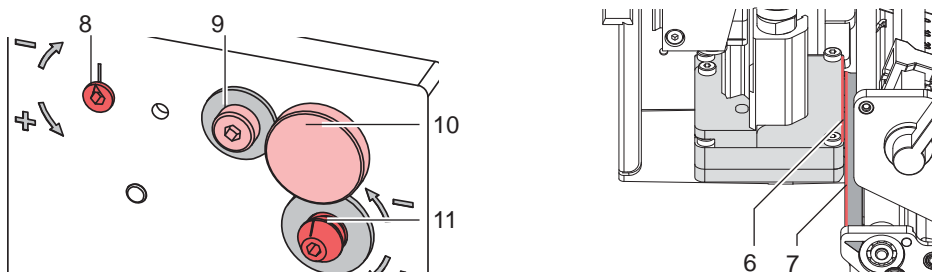


Fig. 23 Adjusting the pad to the dispense edge

1. Loosen knurled screw (10) and screw (9).
2. Press the applicator against the printer and adjust the angle between applicator pad edge (6) and printer dispensing plate (7) via the setting screw (11) and the eccentric (8).
3. Tighten screw (9) and fasten the applicator with knurled screw (10).

7.2 Vacuum Adjustments

The label will be held on the pad by a vacuum.

The vacuum needs to be set up in such a way that the label covers all the suction holes and is not hindered before it reaches its intended position on the pad.

The default Value of the Vacuum is -0.6 bar.


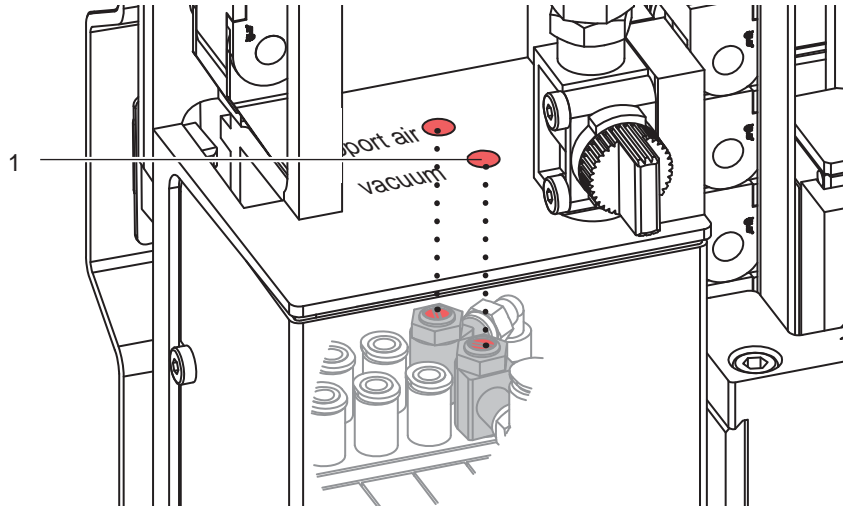


Fig. 24 Throttle valve "vacuum"

- ▶ Adjust the vacuum on the throttle valve "vacuum" (1) so that the label will be sucked up over its entire area.
- ▶ To increase the vacuum turn the setting screw on the throttle valve (1) counterclockwise.

Measuring Point Vacuum (MP V)

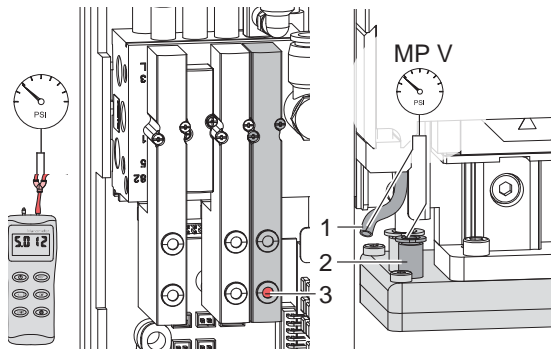

Use a manometer with a measurement range of -7 to 7 bar to control the pressure.

MP V : Vacuum - Reference Value (-0.6 bar)

1. Remove cover.
2. Cover the suction plate so it is airtight.
3. Attach manometer between tube (1) of the energy chain and fitting (2) of the pad.
4. Activate the magnetic valve manually by pressing the micro switch (3) to measure the pressure.
5. Mount cover.

Fig. 25 Measuring points for the vacuum



Attention!

After pressure measurements, reconnect all components correctly.

7.3 Adjusting the Blow Tube (Supporting Air)

The blow tube must be adjusted in such a way that the label takeover is unhindered by turbulence and the supporting air blows the label evenly against the pad.

The default factory value is 2 bar.



Note!

When changing the label size (2", 4" or 6") the appropriate blow tube is to be used.

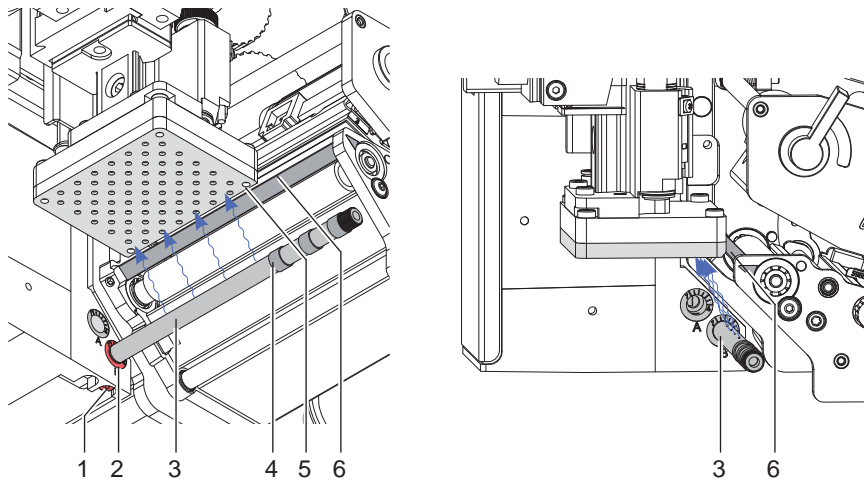


Fig. 26 Adjust the blow tube

The blow tube (4) for the supporting air can be rotated around its axis. That way the direction of the supporting air can be optimized.

1. Loosen screw (1).
2. Put the blow tube (3) into the tube adapter B (2).
Turn the blow tube (2) in the direction that the air current can support the take up of the label.
 - For small labels direct the air current more toward the dispensing edge (5) of the printer.
 - For larger labels direct the air current away from the dispense edge (6).
 Use the graduation guide for orientation.
3. Open as many holes of the blow tube as are needed to cover the label width. Remove rings (4) if necessary.
All holes outside the label width should be covered with the shrink tube rings provided. Once the unneeded holes have been covered the shrink tube should be shrunk.
4. Tighten screw (1).


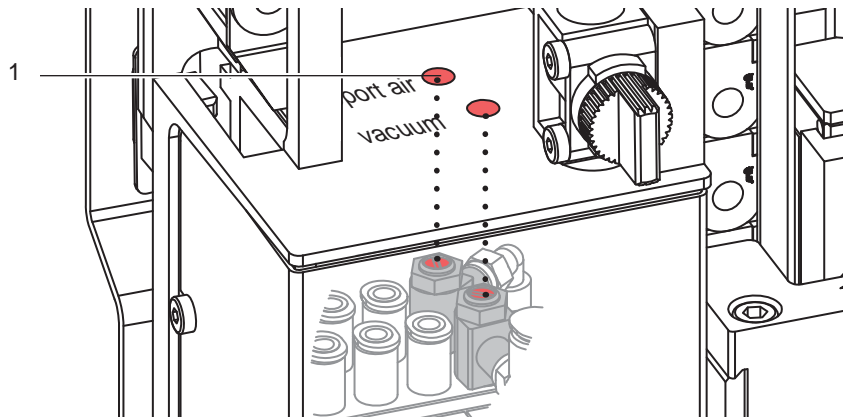


Fig. 27 Throttle valve "support air"

The strength of the supporting air can be varied via the provided throttle valve (1).

► To increase the strength of the supporting air turn the throttle valve (1) counterclockwise.

Measuring Point of the Supporting Air (MP S)

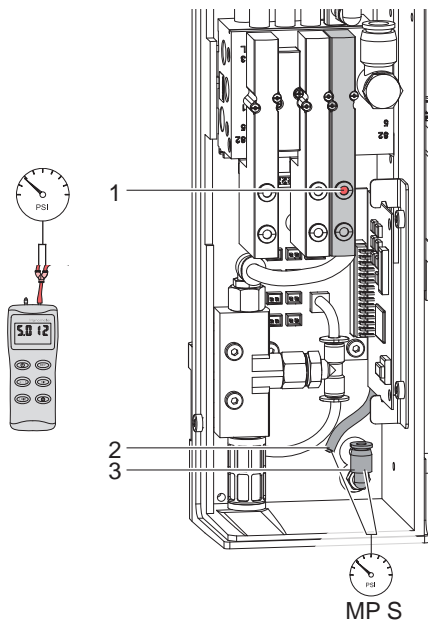

Use a manometer with a measuring range of -7 to 7 bar to measure the pressure.

MP S: Supporting Air (reference value 2 Bar)

1. Dismount cover and connect the manometer to the MP S.
2. Attach manometer between tube (2) and fitting (3).
3. Activate the valve manually by pressing the micro switch (1) to measure the pressure.
4. Mount cover.

Fig. 28 Measuring support air



Attention!

After pressure measurements, connect all components correctly.

After the pressure has been measured ensure that all connections are properly reestablished.

7.4 Adjustment of the Stopper for Blow on Mode

**Note!**


For operation mode "blow on" only!

The operation mode "Blow on" allows labelling without contact.

The pad does not press on the product. The label will be blown from the pad onto the product over a distance of up to 10 mm.

**Attention!**

► Switch off the printer and close the shutoff valve of the compressed air via the shut-off valve!

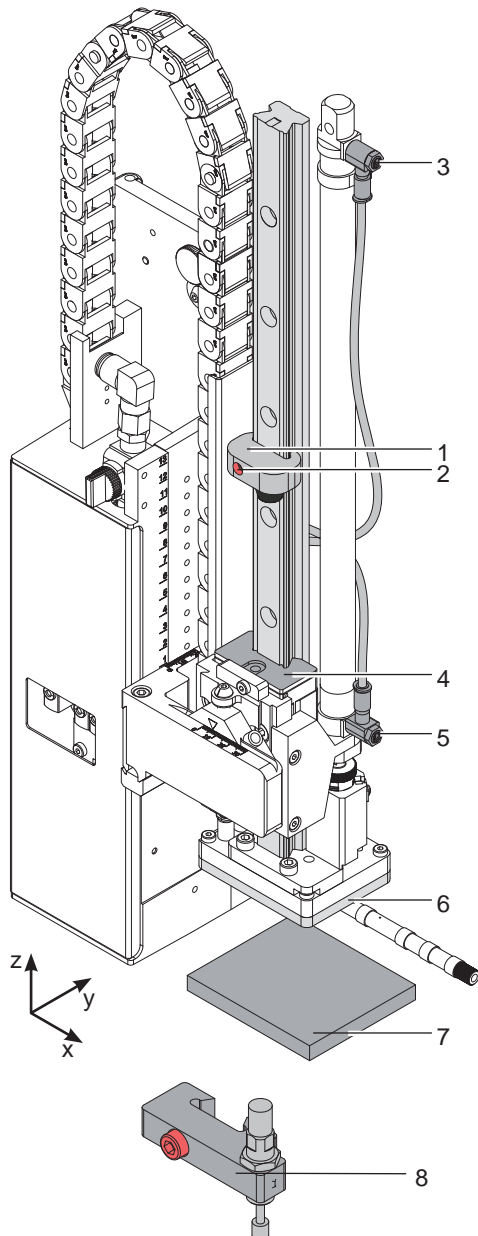

1. Place a product sample (7) on the labelling point.
2. Pull the tubes out of the push-in-fittings (3,5).
3. Loosen the screw (2) of the stopper (1).
4. Move the pad manually to the desired labelling position. The distance between the blow pad (6) in the labelling position and the product surface (7) must not exceed 10 mm.
5. Move the stopper (1) against the guide block (4) and tighten the screw (2).
6. Insert the tubes into the appropriate push-in-fittings (3,5).
7. Open the shutoff valve and switch on the printer.

**Note!**

To reduce the impact energy of the pad it is possible to use a cushioned stopper as illustrated in option (8).

Fig. 29 Adjust the stopper

7.5 Lifting Speed of Cylinder Z

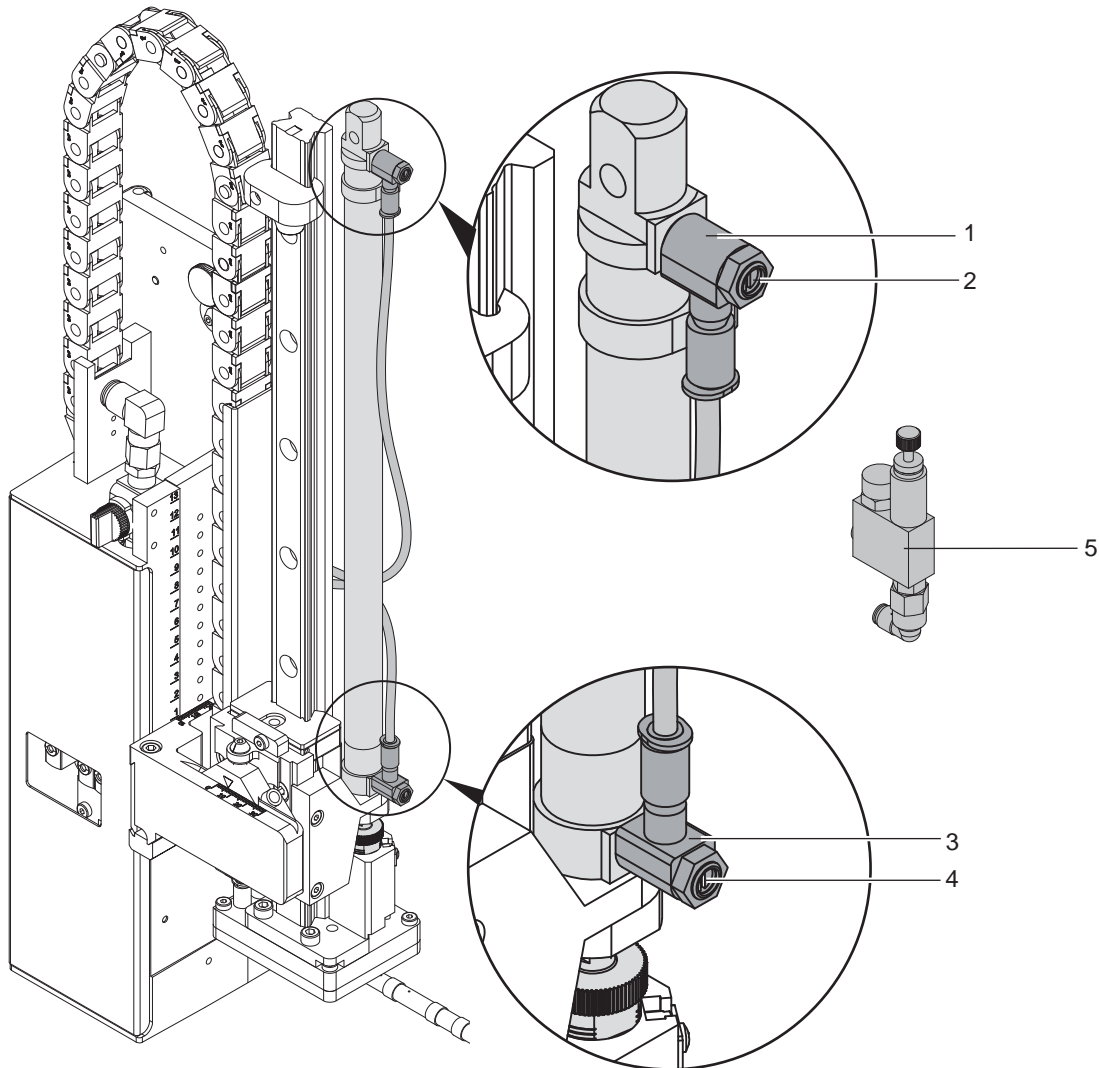


Fig. 30 Throttle valves of the cylinder Z

The speed of the pad movement can be regulated by two throttle valves (1, 3).

- Adjust the pad movement speed as necessary.
- To increase the downward speed turn the screw (4) at the lower valve (3) counterclockwise.
- To increase the upward speed turn the screw (2) of the upper valve (1) counterclockwise.



Note!

The application pressure of the pad is mainly dependent on the downward speed of the pad.

- In order to reduce the application pressure turn screw (4) clockwise.



Attention!

The time for the downward movement of the pad may not exceed 2 seconds otherwise the error message "Lower position" will appear.



Note!

To reduce the air pressure in Z-direction it is possible to use an optional pressure reduction valve (5).

- ▷ 7.8 Adjusting the Options for Z-direction Movement

7.6 Sensors on Cylinder Z

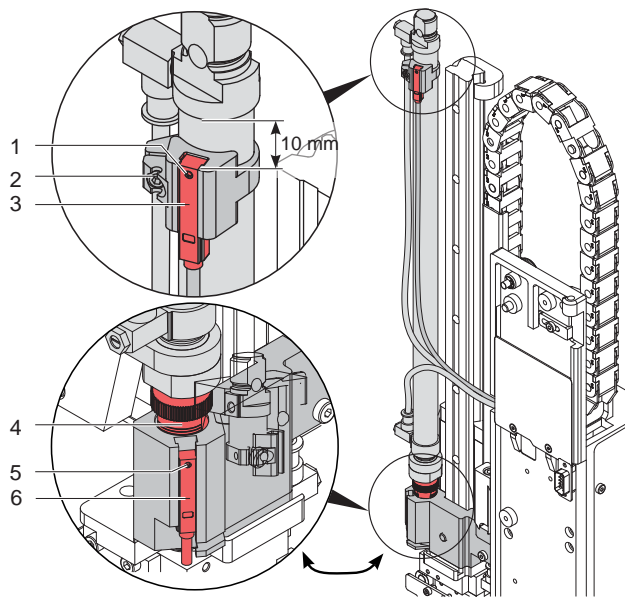


Fig. 31 Sensors on cylinder Z

Sensor Start Position 1

1. Loosen screw (1) of sensor "Start Position" (3) and move the sensor so that the top edge of the sensor sits comfortably in the sensor holder.
2. Remove the compressed air tubes of the cylinder Z and power up the printer with connection to the applicator.
3. Move the pad toward the stopper manually.
4. Loosen screw (2) of the sensor holder.
5. Position the sensor so that it triggers securely, with lit up LED, when cylinder Z is completely contracted. This is achieved with the top edge of the sensor being about 10 mm from the top edge of the connection ring. (Fig. 31)
6. Tighten screw (2).

Labelling Sensor 2

The position of the labelling sensor (6) is dependant on the pad assembly's weight and the mounting position. The spring tension on the adapter bolt is dependant on these parameters and must be adjusted so that the sensor cannot trigger unintentionally. The triggering magnet is integrated in the adapter bolt and changes position with the tension spring.

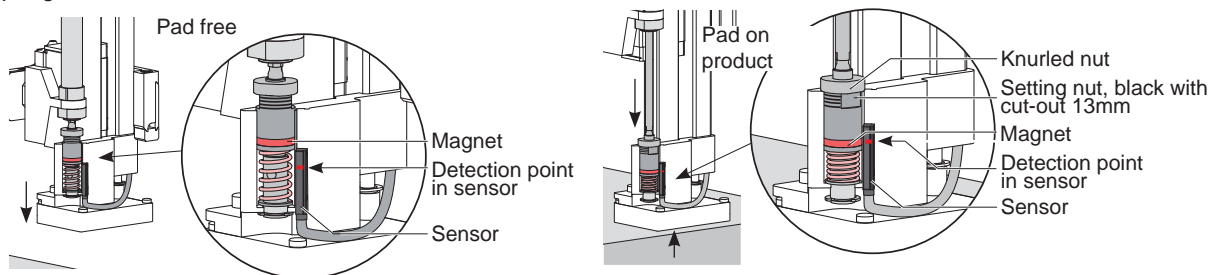


Fig. 32 Labelling sensor principle


1. Getting the printer and applicator into the final orientation.
2. Adjust the spring tension on the adapter bolt (4) via the black setting nut so that:
 - The adapter bolt is not pushed into the stamp assembly group during motion.
 - The sensor triggers when the pad has reached the labeling position.
3. Turn the setting nut with an open spanner 13 mm and fix the knurled nut by holding it.
 - Turning the setting nut clockwise will increase the spring tension.
 - Turning the setting nut counterclockwise will decrease the spring tension.
4. Loosen screw (5) and move the sensor (6) so that the LED lights up when the adapter bold is pushed into the pad assembly.
5. Tighten screw (5).

7.7 End Position Cushioning



Note!

The end position cushioning of the cylinder is set up to client specifications and does usually not need to be adjusted.

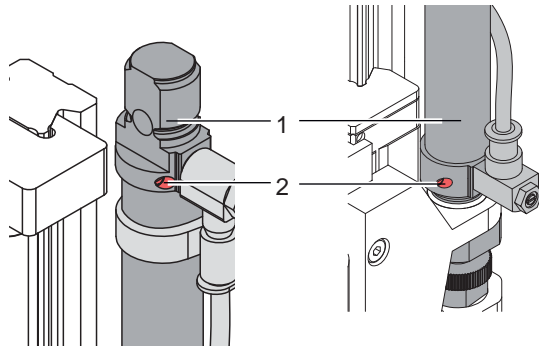

The end position cushioning of the main cylinder reduces the impact energy when the applicator is operating at high speeds and/or masses.

Adjust the end position cushioning so that the piston arrives the end position definitively but does not strike it too hard.

A higher level of end position cushioning will reduce the lift speed.

- ▶ To increase the value of the end position cushioning turn the setting screw (2) clockwise on cylinder (1).
- ▶ To reduce the value of the end position cushioning turn the setting screw (2) counterclockwise on cylinder (1).

Fig. 33 End position cushioning

7.8 Adjusting the Options for Z-Direction Movement

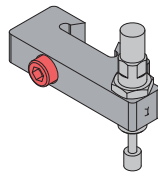


Fig. 34 Stopper with cushioning (guide rail)

The stopper with cushioning (guide rail) reduces the speed of the cylinder Z shortly before impact when the applicator is operated at higher speeds and/or with larger pads.

Adjustments like chapter ▶ „7.4 Adjustment of the Stopper for Blow on Mode“

Adjust the stopper with maximum compressed spring.

▶ „6.5 Transportation Lock“

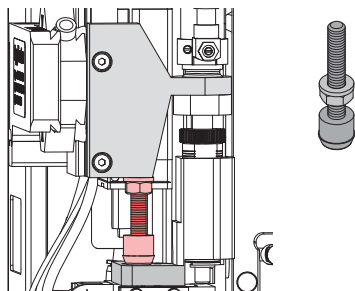


Fig. 35 Stopper (pad assembly)

The stopper avoids the triggering of the labelling sensor by the weight of the pad assembly during the inward motion of an installation turned 90° or 180°.

The setting occurs during the take-up of the label from the printer.

1. Loosen the counter nut of the stopper.
2. Turn the stopper until it touches the pad retainer lightly. Do not change the take over position of the pad by via stopper.
3. Tighten the counter nut to fix the stopper.

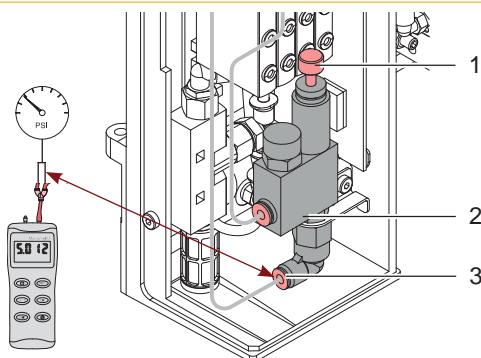


Fig. 36 Pressure reduction valve cylinder Z

The pressure reduction valve (2) can be used when labelling pressure-sensitive products or considering general safety aspects to reduce the pressure of the cylinder in the Z-direction.

The standard value is 2.5 bar.


- ▶ Connect the manometer between tube and exit (3) and adjust the pressure to 2.5 bar with the knurled screw (1).

It is possible to order an upgraded set with a pressure reduction valve.

Instructions are provided with the upgraded set.


7.9 Labeling from below - Changing the Spring of the Impact Sensor

For fault free labeling in a sideways- or upward-motion it is necessary to change the spring of the impact sensor. The stronger spring prevents the unwanted triggering of the impact sensor due to the inertia of the cylinder and stamp assembly group.

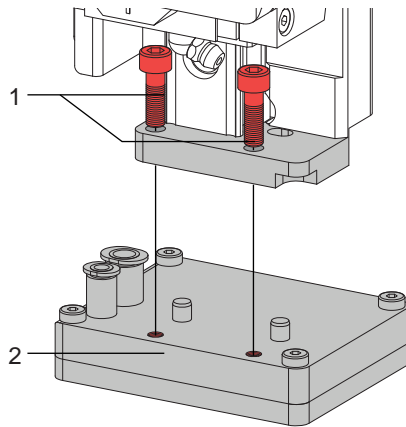


- Loosen screw (1) and dismount the stamp (2) to reach the locking washer (6).

Fig. 37 Demounting the stamp

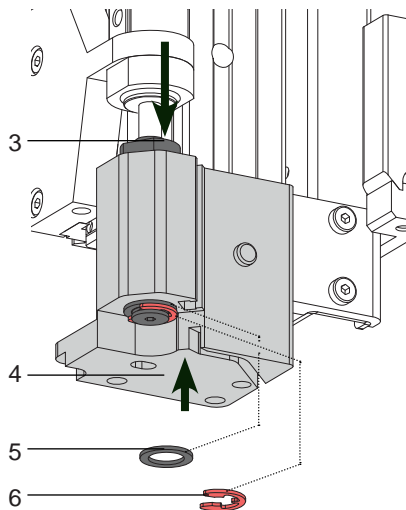

- Push the adapter bolt (3) into the stamp uptake (4) to ensure that the bottom of the bottom of the bolt is pushed out. Demount locking plate (6).
- Remove washer (5).

Fig. 38 Loosening the adapter bolt

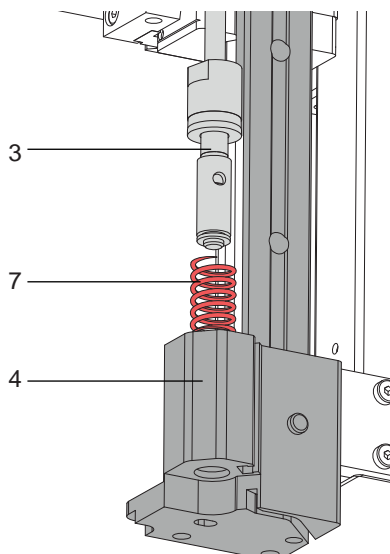

- Hold onto the adapter bolt (3) and pull off the stamp uptake (4).
- Pull out the pressure spring (6) and replace it with the alternative.
- Push together the stamp uptake (4) and the adapter bolt (3).
- Replace the washer (5).
- Place the locking washer (6) back into it's position.

Fig. 39 Changing the spring

The applicator can be operated in different ways. While the original process stays the same, the operation mode can be chosen from the printer setup.

The most important setting is the selection between the operation modes "Stamp on", "Roll on" and "Blow on".

Additionally the applicator has different application modes concerning the order of printing and applying within one labelling cycle.

	Stamp on	Roll on	Blow on
Print/Apply	x	x	x
Apply/Print Waiting position up	x	x	x
Apply/Print Waiting position down	-	-	x

Table 4 Operation and application modes

Additionally all operating modes can be adjusted by setting different time delays.



Note!

For more information about the printer configuration and the function of the keys in the navigator pad

▷ Configuration manual of the printer or ▷ Operator's manual of the printer

8.1 Method for Changing the Printer Setup

1. Press **menu** button.
2. Select Setup > Machine param. > Applicator.
3. Select and adjust the needed parameters.
4. Return to the "Ready" mode.

8.2 Quick Mode for Setting the Delay Times

Beside the standard method for the printer configuration there is a quick mode to adjust the delay times.



Note!

The quick mode settings can be made during operation. The changes directly affect the current print job.

1. Press the **menu** button for at least 2 seconds.
The first delay time appears on the display.
2. Adjust the delay time by pressing the ▲ button and ▼ button.
3. To switch between the different delay times press the ► button.
4. To leave the quick setup mode press the ◀ button.
The selected delay times are stored by the printer.

8.3 Configuration Parameters of the Applicator

The configuration parameters of the applicator can be found in the menu `Setup > Machine param.`


 












Parameter	Meaning	Default
 Applicator	Configuration parameters of the applicator	
 > Mode of oper.	Setting the operation mode Stamp on, Roll on, Blow on	Stamp on
 > Mode of appl.	Setting the application mode Print-Apply/Apply-Print Print-Apply: An external start signal begins the printing of a label followed by the application of that label. After the cycle is complete, the pad waits in the start position without a label. Apply-Print: A separate signal starts the printing of the first label and the transfer of that label to the pad. The start signal applies that label and the next label is printed. The cycle ends with a printed label on the pad.	Print-Apply
 > Waiting position	only for Mode of oper. Blow on and Mode of appl. Apply-Print up : Pad waits in the start position for the start signal down : Pad waits in the labelling position for the start signal	up
 > Blow time	only for Mode of oper. Blow on The length of time (max. 2.5 s) air is blown for the label transfer	0 ms
 > Support delay on	Sets the delay (max. 2.5 s) for the supporting air after printing start and switching on the supporting air. The delay prevents turbulence at the front of the label and, consequently, prevents issues when the label is being picked up from the printer.	0 ms
 > Support del. off	Setting the switch-off delay (max. 2.5 s) for the supporting air between the end of label forwarding and switching on the supporting air. The delay can be useful to separate the rear end of the label from the backing to avoid flaws and to improve the accuracy of label positioning	270 ms
 > Delay time	Delay (max. 2.5 s) between start signal and the start of a labelling cycle. Allows the use of product sensors within conveyors systems for example	0 ms
 > Lock time	All start signals coming in after the first start signal are ignored when they arrive within the lock time.	0 ms
 > Peel position	Shift the position of the dispensed label relative to the dispensing edge. In the software an extra peel offset value is available. The offset values from "Peel position" and from software are added together for execution. ▷ "Setting the Peel Position".	0.0 mm
 > Vacuum control	Setting the label transfer check from printer to pad and from pad to product by the vacuum sensor	On
 > Hand-over up	Take over the label directly from the dispensing edge with contact between pad and dispensing edge. Not applicable for Type 4014/4016	Off
 > Cleaning blow	Activate/Deactivate - air pressure pulses to clean the pad	On
 > Vacuum delay	On - The vacuum will switched on after the end of the label transport. Off - The vacuum will switched on with the start of the label transport.	Off

Table 5 Applicator parameters

8.4 Setting the Peel Position

To optimize the transfer of the labels from the printer to the pad there are two different parameters available for adjusting the peel position.



Attention!

- ▶ First adjust the parameter "Peel Position" in the printer configuration.
- ▶ Then adjust the additional peel-off offset in the software.

It is very important to follow that procedure for a certain start after label loading and for the re-start after error treatment.

Parameter "Peel Position" in the printer configuration

- ▶ Check the basic settings in the printer setup. Perform labelling cycles by alternately pressing the **feed** button and Enter button ↵. ▷ „9.1 Test Mode without Print Job“
- ▶ Adjust the "Peel Position" in such a way, that the blank labels are peeled-off completely from the liner
▷ „8.3 Configuration Parameters of the Applicator“

Peel-off offset in the software

- ▶ Check the setting in the software. Perform labelling cycles by repeatedly pressing the Enter button ↵.
- ▶ Adjust the peel-off offset in such a way, that the printed labels are peeled-off completely from the liner
▷ Programming manual or software documentation.

8.5 Activation of Peel-off Mode



Note!

- ▶ For labelling operation activate the peel-off mode in the software.
- ▶ For direct programming use the P command ▷ Programming manual.

9.1 Test Mode without a Print Job

**Warning!**

The pad will be moved to the starting position immediately!

Danger of injury to hands and fingers by the moving pad!

► Do not reach into the zone of the moving pad and keep long hair, loose clothes, and jewelry away.

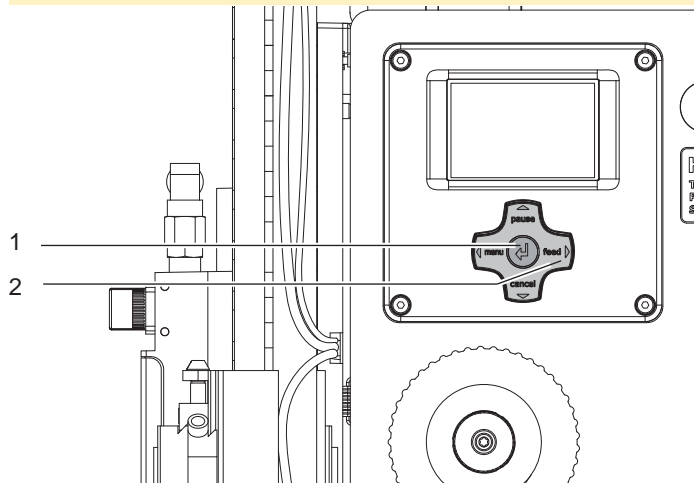


Fig. 40 Test mode with the enter button ◀ (1)

**Note!**

► Please use this test mode to adjust the parameter "peel position" in the printer configuration.

The whole labelling process can be simulated without the need of a print job or a connection to a computer by alternately pressing the **feed** button (2) and the Enter button ◀ (1):

- Press the **feed** button (2).
A blank label is fed. The vacuum at the pad as well as the supporting air (blow tube) are switched on. After the label has been picked up by the pad, the supporting air is switched off.
- Press the Enter button ◀ (1).
The pad is moved to the labelling position. A sensor signals when the labelling position is reached. The vacuum is switched off and the label is placed onto the product. Then, the pad is moved back into the starting position.

9.2 Test Mode with Print Job

**Note!**

► Please use this test mode to adjust the peel-off offset in the software.

This method allows to check labelling processes with the real print data using the Enter button ◀ (1).

- Send a print job.

The test mode is executed in two half cycles:

- Press the Enter button ◀ (1).

Half cycle 1

A label is printed. The vacuum of the pad as well as the supporting air (blow tube) are switched on. After the label has been picked up by the pad, the supporting air is switched off.

- Press the Enter button ◀ (1) again.

Half cycle 2

The pad is moved to the labelling position. A sensor signals when the labelling position is reached. The vacuum is switched off and the label is placed onto the product. Then, the pad is moved back into the starting position.

10.1 Retainer Assembly

No.	Part-No.	Description	PU	Serial No.	
				from	to
1	5902489.001	Screw DIN7984-M4x8	10		
2.1	5964129.001	Cover L	1		
2.2	5964260.001	Cover R	1		
3	5964367.001	Knurled Screw	1		
4	5964104.001	Set Screw	1		
5	5904544.001	Spring	10		
6	5964090.001	Bar	1		
7.1	5964429.001	Plate L	1		
7.2	5964438.001	Plate R	1		
8	5902021.001	Screw DIN7991-M3x6	10		
9	5903525.001	E-Ring DIN6799-0	10		
10.1	5964036.001	Mounting Plate L	1		
10.2	5964185.001	Mounting Plate R	1		
11.1	5964318.001	Adapter Profile L/R 200/300H	1		
11.2	5970013.001	Adapter Profile L 400H	1		
11.3	5970014.001	Adapter Profile R 400H	1		
12	5902167.001	Screw DIN912 M5x46	10		
13.1	5964312.001	Crossbeam 4014L	1		
13.2	5964331.001	Crossbeam 4014R	1		
13.3	5964332.001	Crossbeam 4016L	1		
13.4	5964333.001	Crossbeam 4016R	1		
14.1	5964310.001	Clamping Element L	1		
14.2	5964328.001	Clamping Element R	1		
15	5964062.001	Binder	1		
98	5966530.001	Eccentric	1		
99	5966529.001	Hinges	1		

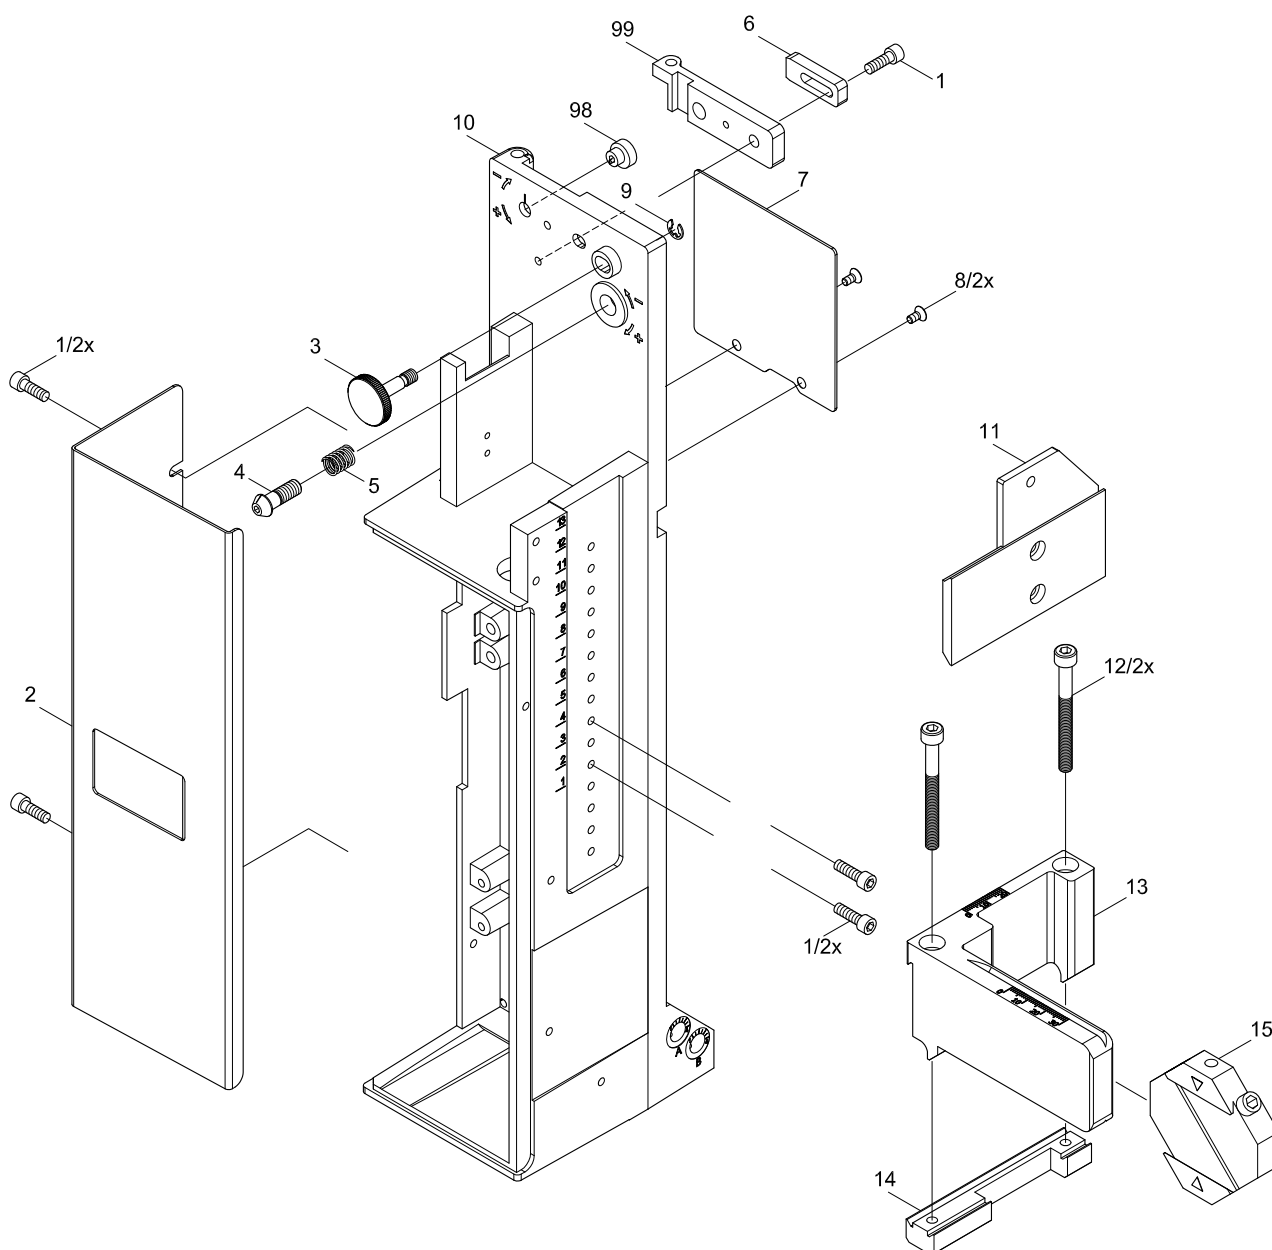


Fig. 41 Retainer assembly - spare parts

10.2 Pneumatics Retainer Assembly

No.	Part-No.	Description	PU	Serial No.	
				from	to
1	5902489.001	Screw DIN7984-M4x8	10		
16	5902863.001	Screw DIN7984 M4x21	10		
17	5905285.001	Push-in L-Connector	1		
	FESTO 153276	QSLF-1/8-8			
18	5905284.001	Block Valve	1		
	FESTO 153296	HE-3-1/8-1/8			
19	5906656.001	Push-in/threaded Fitting	1		
	FESTO 153023	QSF-1/8-6-B			
20	5966460.001	Tube Ø 5	2m		
	FESTO 152584	PUN 4x0.75-SI			
21	5966463.001	Tube Ø 4	2m		
	FESTO 152663	UN-4x0.75-SW			
22	5966464.001	Tube Ø 1	2m		
	FESTO 152665	PUN-6x1-SW			
23	5966465.001	Tube Ø 4	2m		
	FESTO 152665	PUN-8x1.25-SW			
24	5905972.001	Push-in Y-Fitting	1		
	FESTO 153371	QSMY-4			

No.	Part-No.	Description	PU	Serial No.	
				from	to
26.1	5906852.001	Valve Block	L	1	
26.2	5906868.001	Valve Block	R	1	
27	5906021.001	Valve		1	
28	5906022.001	Valve		1	
31	5905317.001	Push-in L-Connector		1	
	FESTO 153335	QSM-L-1/8-6			
32	5906844.001	Vacuum Generator		1	
	FESTO 193509	VN-10-H-T3-PI4-VI4-RO1			
33	5905257.001	Silencer		1	
	FESTO 2307	U-1/8			
35	5905338.001	Push-in T-Connector		1	
	FESTO 153355	QSM-T-1/8-4			
37	5905283.001	Push-in/threaded Fitting		1	
	FESTO 153315	QSM-M5-4-I			
38.1	5964277.001	Blow Tube	2"	1	
38.2	5964095.001	Blow Tube	4"	1	
38.3	5964614.001	Blow Tube	6"	1	
81	5906967.001	Pressure Reduce Valve		1	

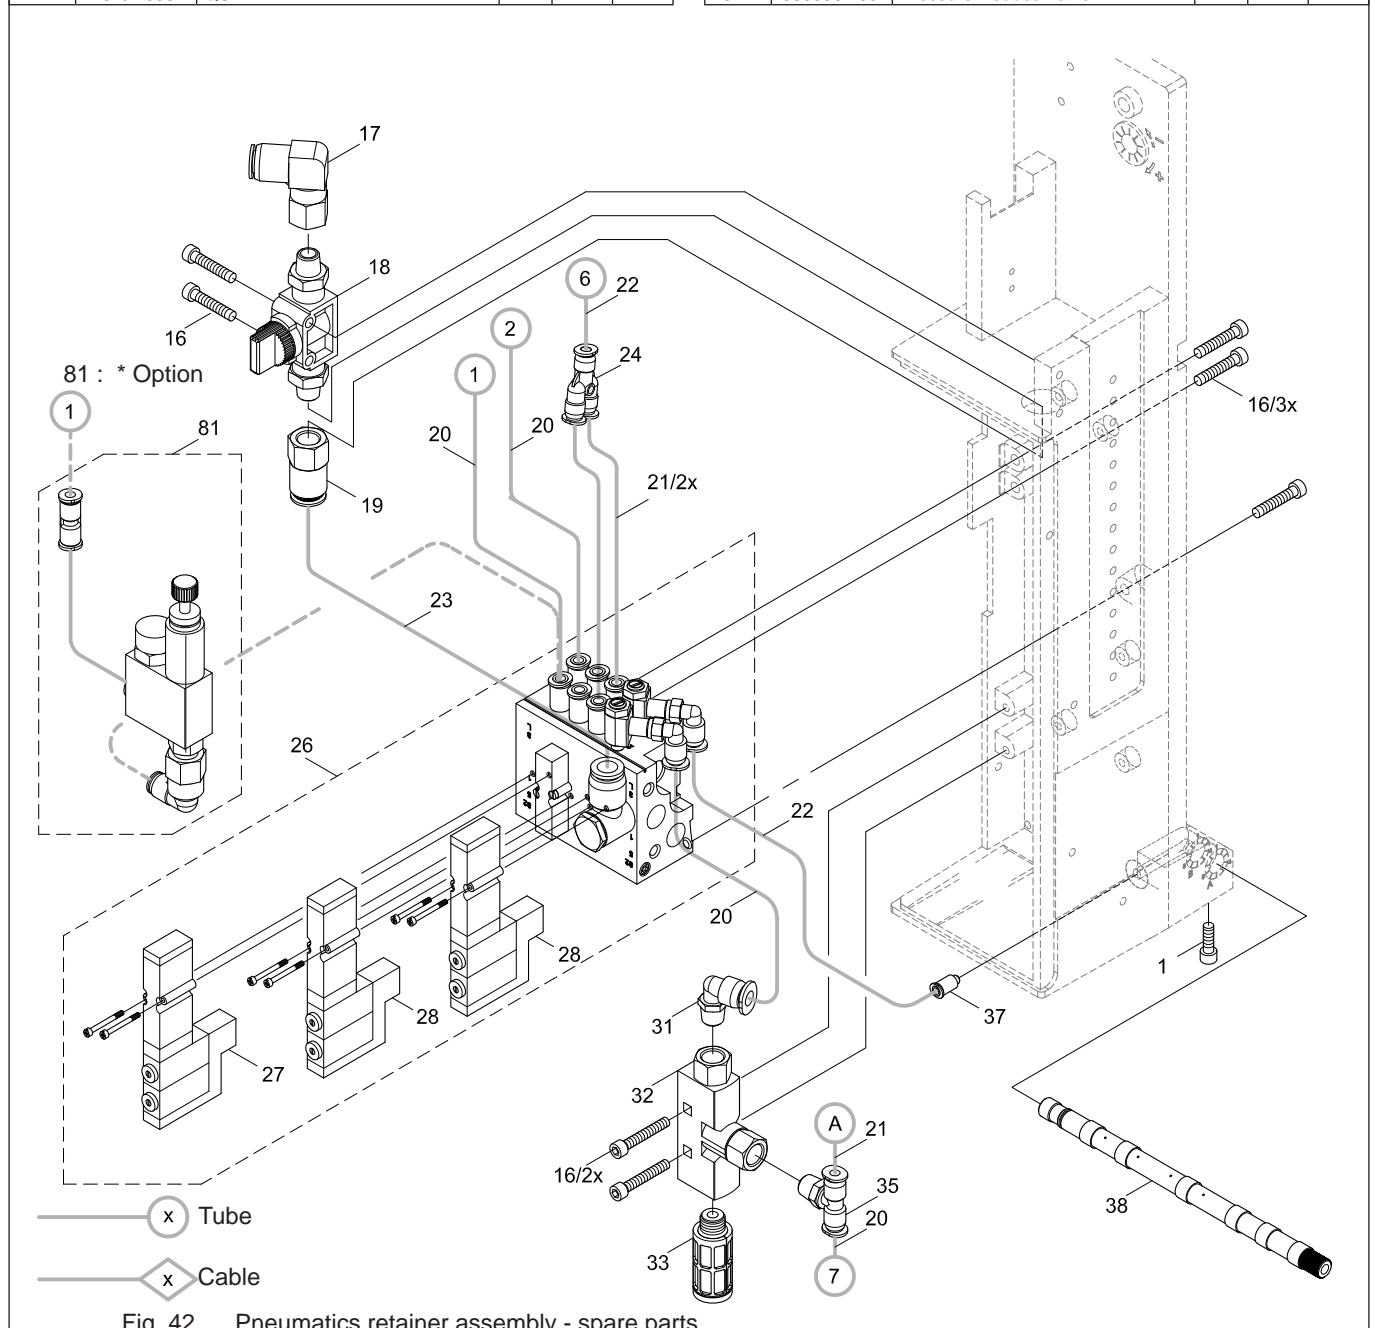


Fig. 42 Pneumatics retainer assembly - spare parts

10.3 Electronics Retainer Assembly

No.	Part-No.	Description	PU	Serial No.	
				from	to
21	5966463.001	Tube Ø 3	2m		
39	5902144.001	Screw DIN7984-M3x1	10		
40	5964045.001	Bracket	1		
41	5955586.001	Cable	1		
42.1	5964590.001	Cable Ground 200H	1		
42.2	5964591.001	Cable Ground 300H	1		
42.3	5964592.001	Cable Ground 400H	1		
43	5902571.001	Screw DIN7984-M4x1	10		
44.1	5955579.001	Applicator Interfaces L	1	6123	
44.1	5971416.001	Applicator Interfaces L	1	6124	
44.2	5964188.001	Applicator Interfaces R	1	6123	
44.2	5971417.001	Applicator Interfaces R	1	6124	

No.	Part-No.	Description	PU	Serial No.	
				from	to
45	5955585.001	PCB Valve Block assem.	1		
46.1	5964454.001	Sensor Start Pos. Zyl.Z 200H	1		
46.2	5964494.001	Sensor Start Pos. Zyl.Z 300H	1		
46.3	5964495.001	Sensor Start Pos. Zyl.Z 400H	1		
47.1	5964490.001	Sensor End Pos. Zyl.Z 200H	1		
47.2	5964594.001	Sensor End Pos. Zyl.Z 300H	1		
47.3	5964595.001	Sensor End Pos. Zyl.Z 400H	1		
48	5955576.001	Controller	1		
49	5955575.001	Applicator Control	1		
50	5964041.001	Holder	1		
97	5906943.001	Sealing Ring	10		

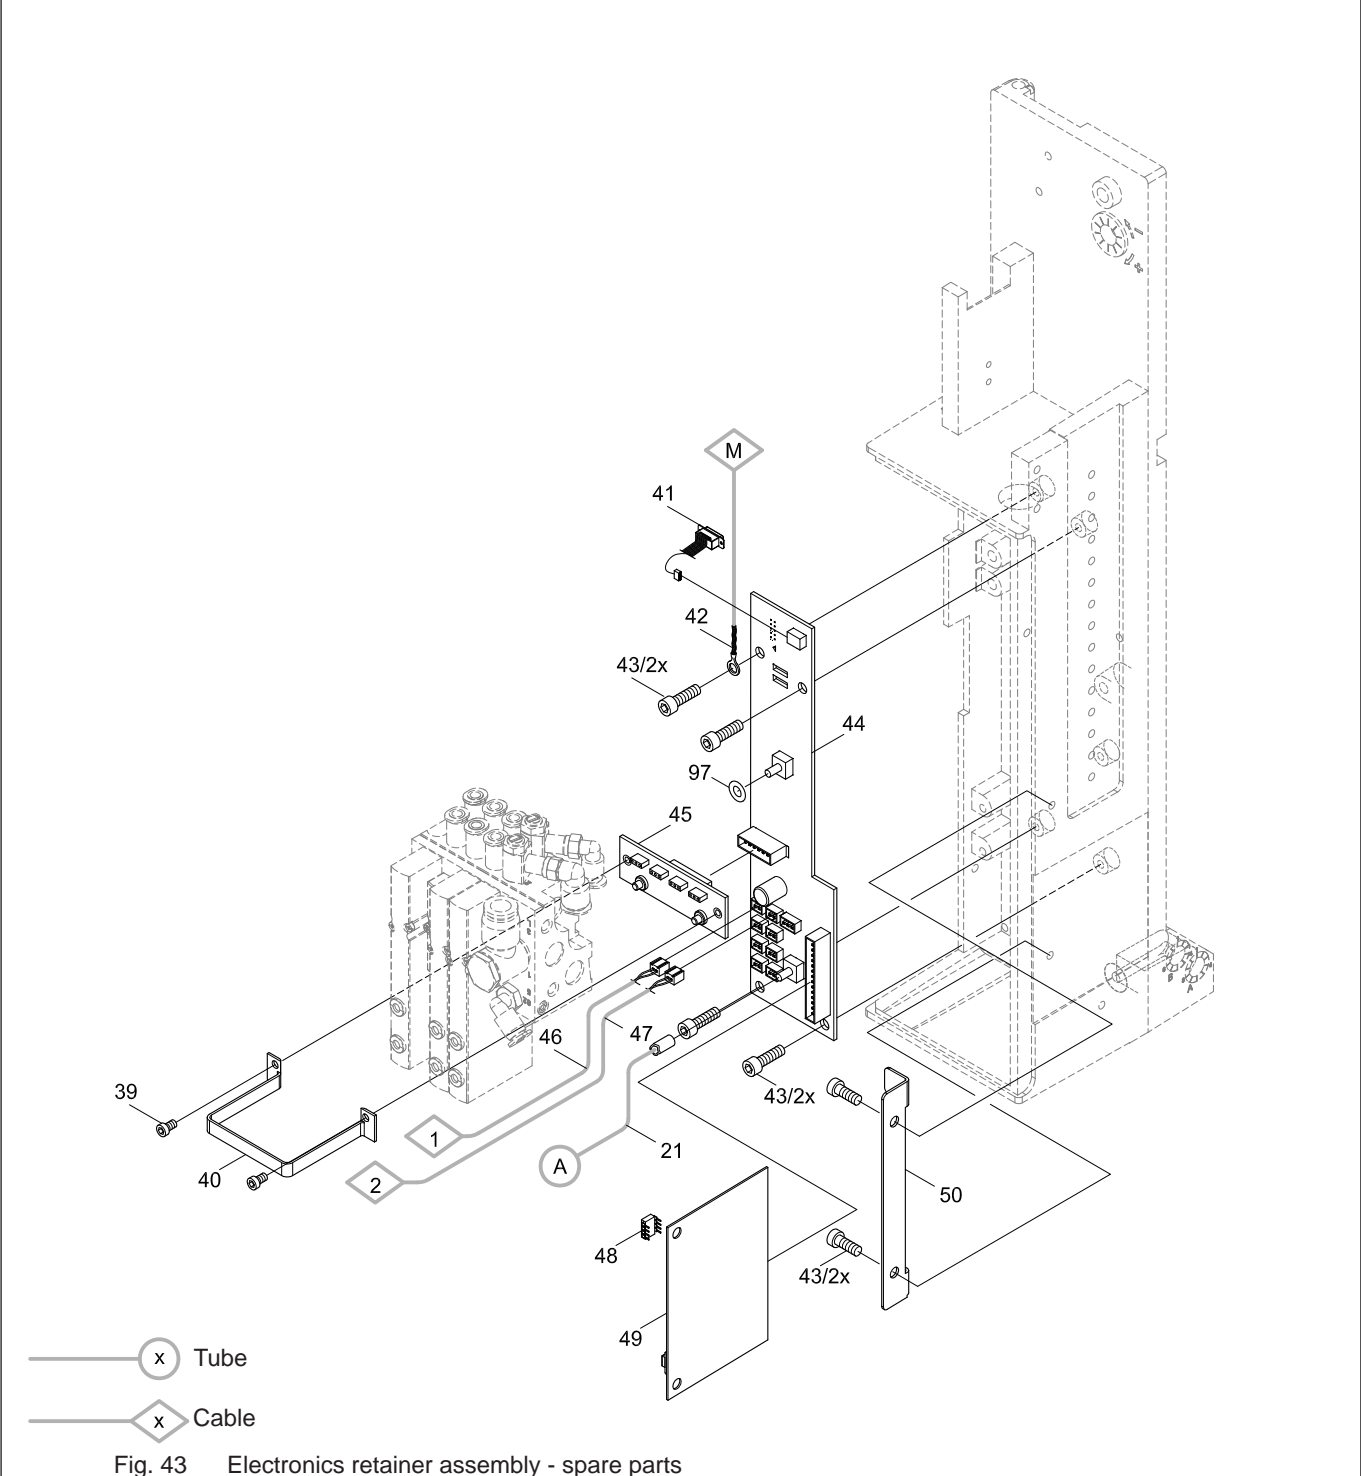


Fig. 43 Electronics retainer assembly - spare parts

10.4 Guiding Cylinder Assembly

No.	Part-No.	Description	PU	Serial No.	
				from	to
47.1	5964490.001	Sensor End Pos. Zyl.Z 200H	1		
47.2	5964594.001	Sensor End Pos. Zyl.Z 300H	1		
47.3	5964595.001	Sensor End Pos. Zyl.Z 400H	1		
51	5964343.001	Stopper* Option	1		
52	5964364.001	Stopper	1		
53	5964061.001	Setting Screw	1		
54	5965966.001	Sliding Carriage	1		
55.1	5964302.001	Plate L	1		
55.2	5964337.001	Plate R	1		
56	5903505.001	E-Ring DIN6799-1	10		
57.1	5964301.001	Holder L	1		
57.2	5964336.001	Holder R	1		
58	5902562.001	Screw DIN7984-M4x10	10		
59	5521159.001	Nut	1		
60.1	5964236.001	Pad Retainer L	1		
60.2	5964241.001	Pad Retainer R	1		
61	5964311.001	Adapter Bolt	1		
62.1	5905069.001	Spring	1		
62.2	5905049.001	Spring	1		
63	5521157.001	Washer	1		
64	5521158.001	Washer	1		
65	5903501.001	E-Ring DIN6799-3	10		
78	5964351.001	Stopper*	1		
79.1	5964240.001	Plate L	1		
79.2	5964244.001	Plate R	1		
80	5902281.001	Screw DIN7984-M5x9	10		

51, 78 : * Option

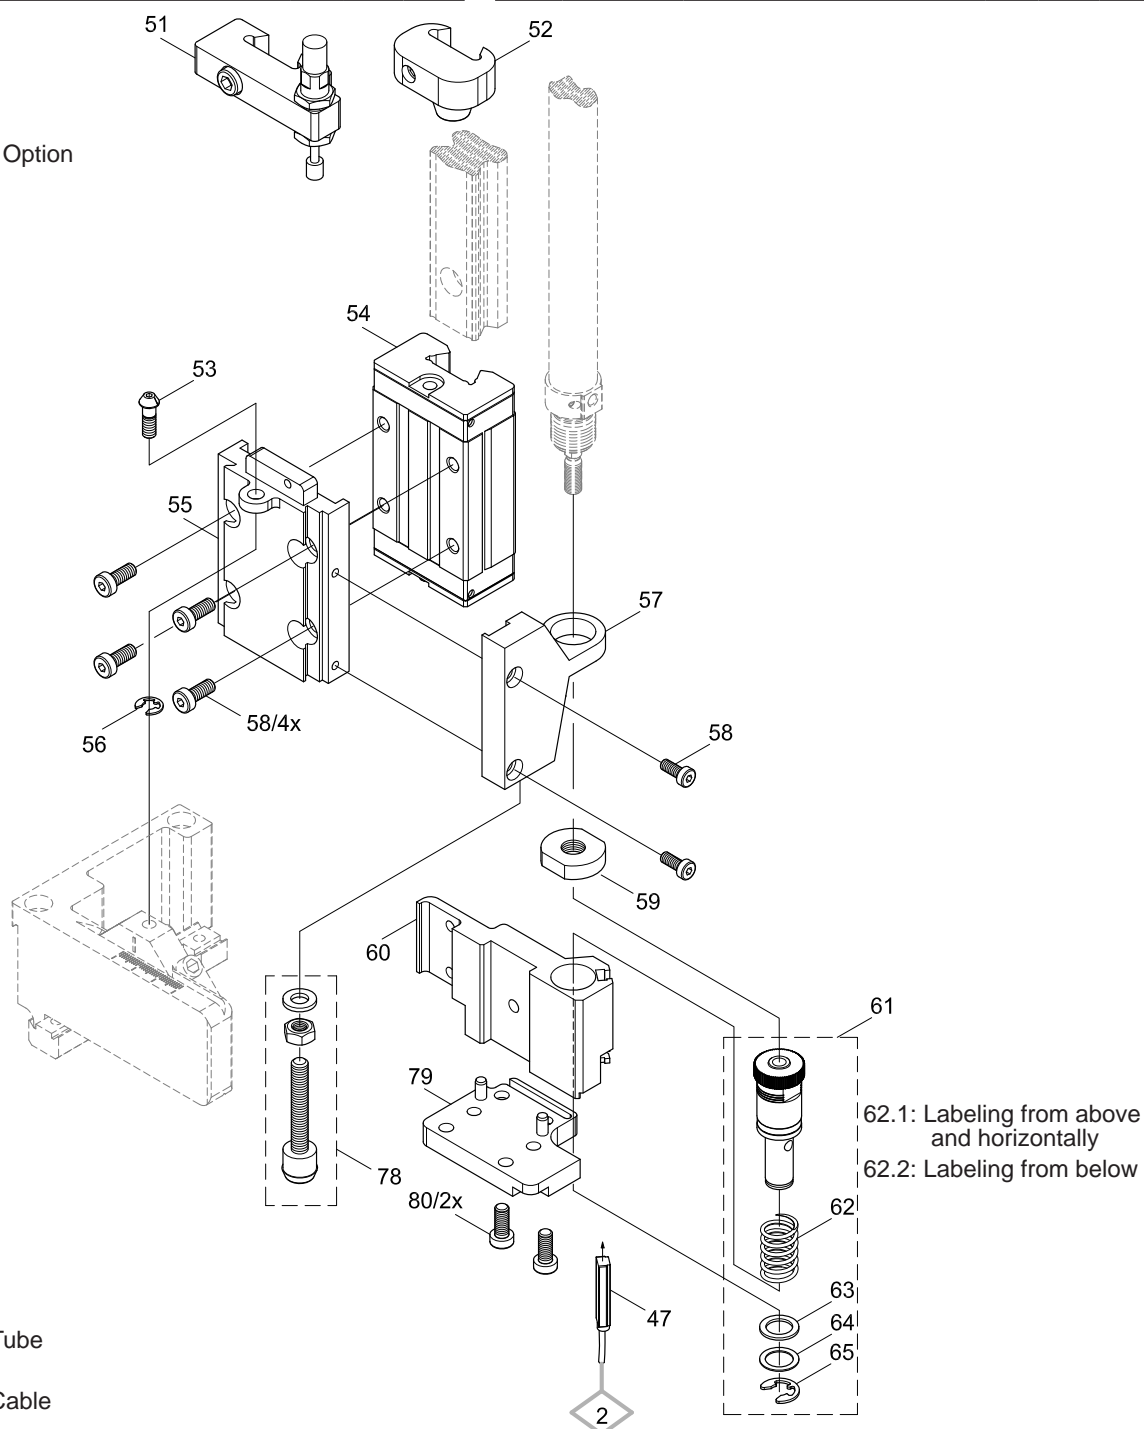


Fig. 44 Guiding cylinder assembly - spare parts

10.5 Cylinder Assembly Z

No.	Part-No.	Description	PU	Serial No.	
				from	to
1	5902489.001	Screw DIN7984-M4x8	10		
20	5966460.001	Tube Ø 4	2m		
	FESTO 152584	PUN 4x0.75-SI			
22	5966464.001	Tube Ø 0	2m		
	FESTO 152584	PUN-6x1-SW			
42.1	5964590.001	Cable Ground	200H	1	
42.2	5964591.001	Cable Ground	300H	1	
42.3	5964592.001	Cable Ground	400H	1	
46.1	5964454.001	Sensor Start Pos. Zyl.Z	200H	1	
46.2	5964494.001	Sensor Start Pos. Zyl.Z	300H	1	
46.3	5964495.001	Sensor Start Pos. Zyl.Z	400H	1	
66.1	5964373.001	Energy Track	200H	1	
66.2	5964374.001	Energy Track	300H	1	
66.3	5964375.001	Energy Track	400H	1	
67	5902047.001	Screw DIN7991-M3x5	10		
68.1	5964347.001	Bracket	L200H	1	
68.2	5964357.001	Bracket	L300H	1	
68.3	5964358.001	Bracket	L400H	1	
68.4	5964396.001	Bracket	R200H	1	
68.5	5964398.001	Bracket	R300H	1	
68.6	5964402.001	Bracket	R400H	1	
69.1	5964306.001	Guide Rail	200H		
69.2	5964307.001	Guide Rail	300H	1	
69.3	5964308.001	Guide Rail	400H	1	
70	5905593.001	Mounting Clip	1		
	FESTO 175094	SMBR-8-16			
71	5906636.001	One-way Flow Control Valve	1		
	FESTO 175056	GRLA-M5-QS-4-LF-C			
72.1	5964440.001	Cover	L200H	1	
72.2	5964483.001	Cover	L300H	1	
72.3	5964484.001	Cover	L400H	1	
72.4	5964451.001	Cover	R200H	1	
72.5	5964453.001	Cover	R300H	1	
72.6	5964485.001	Cover	R400H	1	
73.1	5906938.001	Cylinder	200H	1	
	FESTO 19235	DSNU-16-200-PPV-A			
73.2	5905973.001	Cylinder	300H	1	
	FESTO 14320	DSNU-16-300-PPV-A			
73.3	5906117.001	Cylinder	400H	1	
	FESTO 14320	DSNU-16-400-PPV-A			
74	5902837.001	Screw DIN7984 M4x8	10		
75		Pad (customized)			
76	5964443.001	Bolt	1		
77	5964489.001	Knurled Nut	300H/400H	1	
95	5902224.001	Screw DIN7991-M4x12	10		
96.1	5966524.001	Support	L 400H	1	
96.2	5966528.001	Support	R 400H	1	
100	5902335.001	Screw DIN7984-M6x25	10		

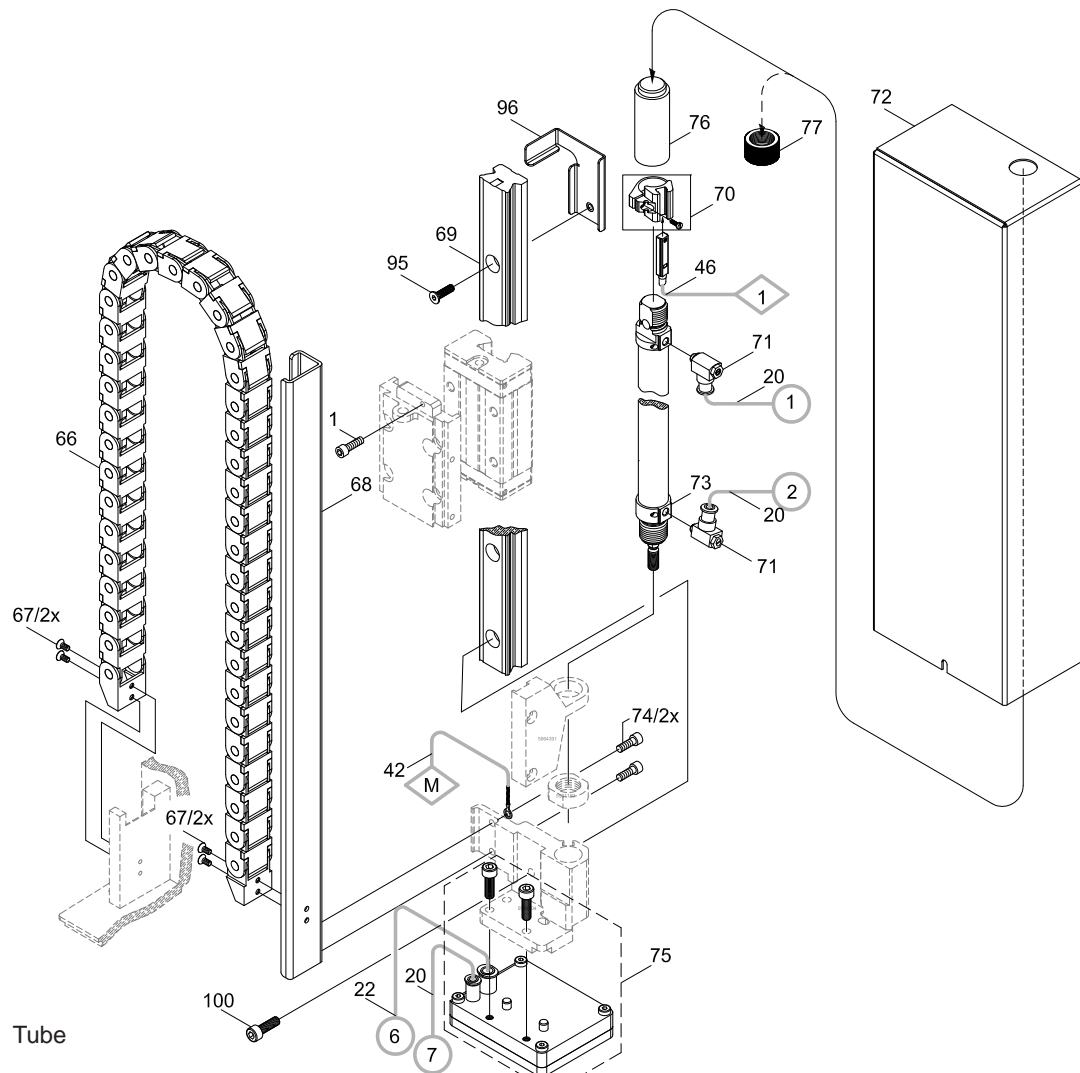


Fig. 45 Cylinder assembly Z - spare parts

11.1 Block Diagram Type 4014/4016

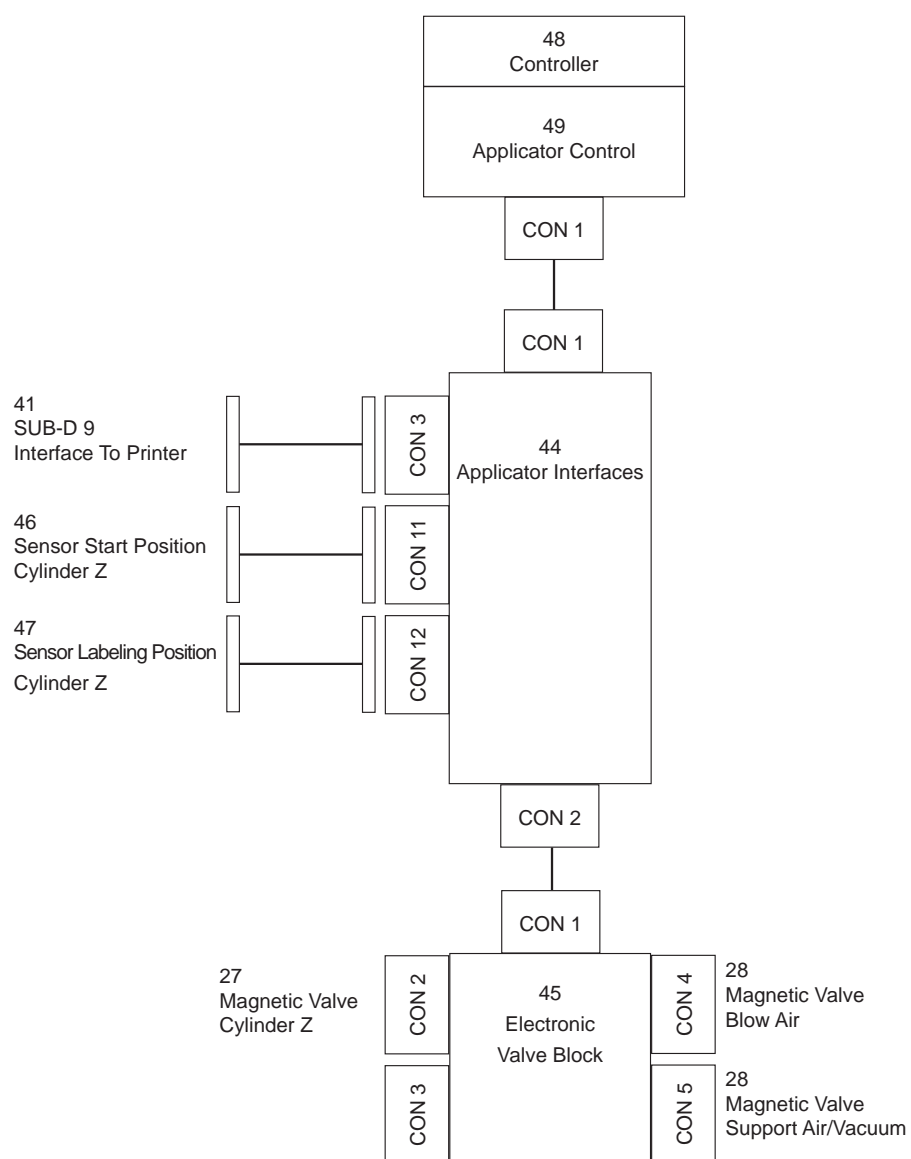


Fig. 46 Block diagram 4014/4016

11.2 Pneumatic Drawing Type 4014/4016


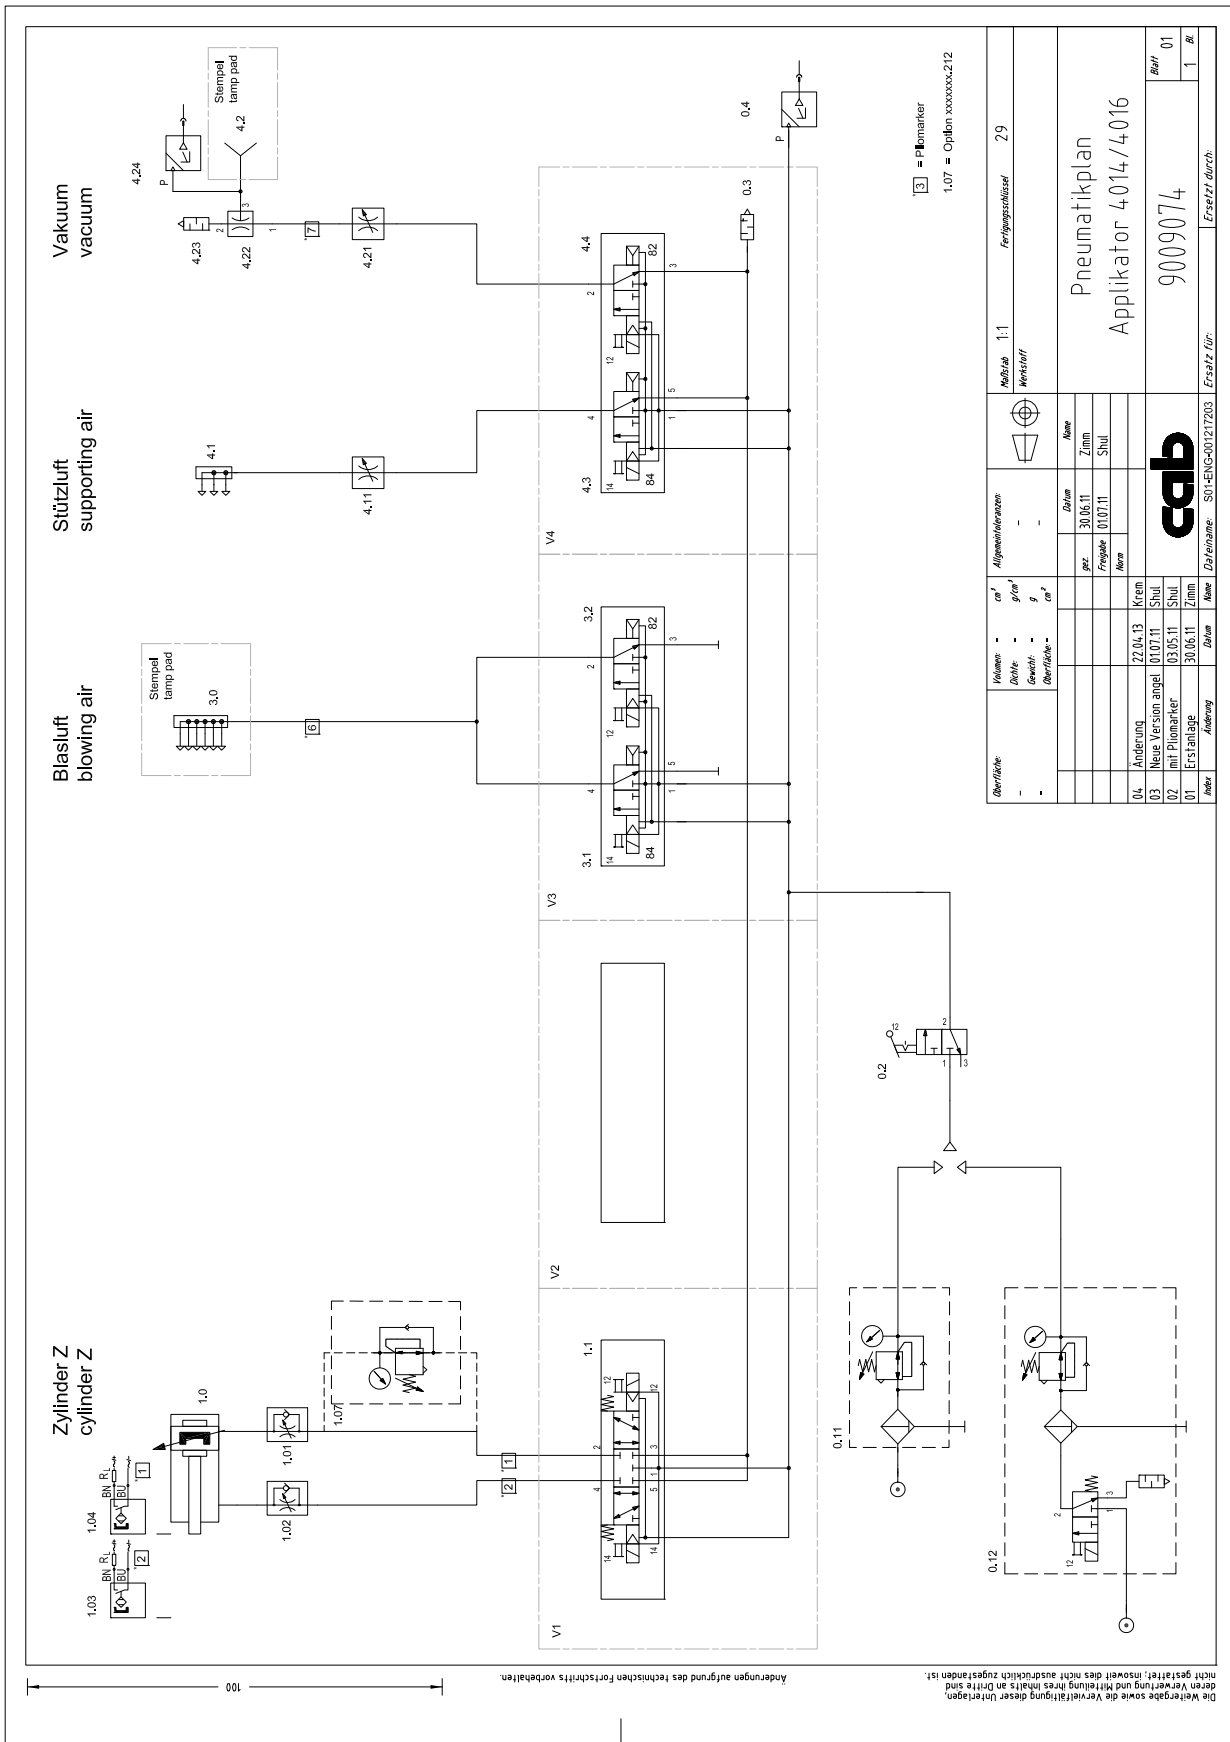


Fig. 47 Pneumatics type 4014 / 4016

11.3 Label Position Type 4014 L/4016 L

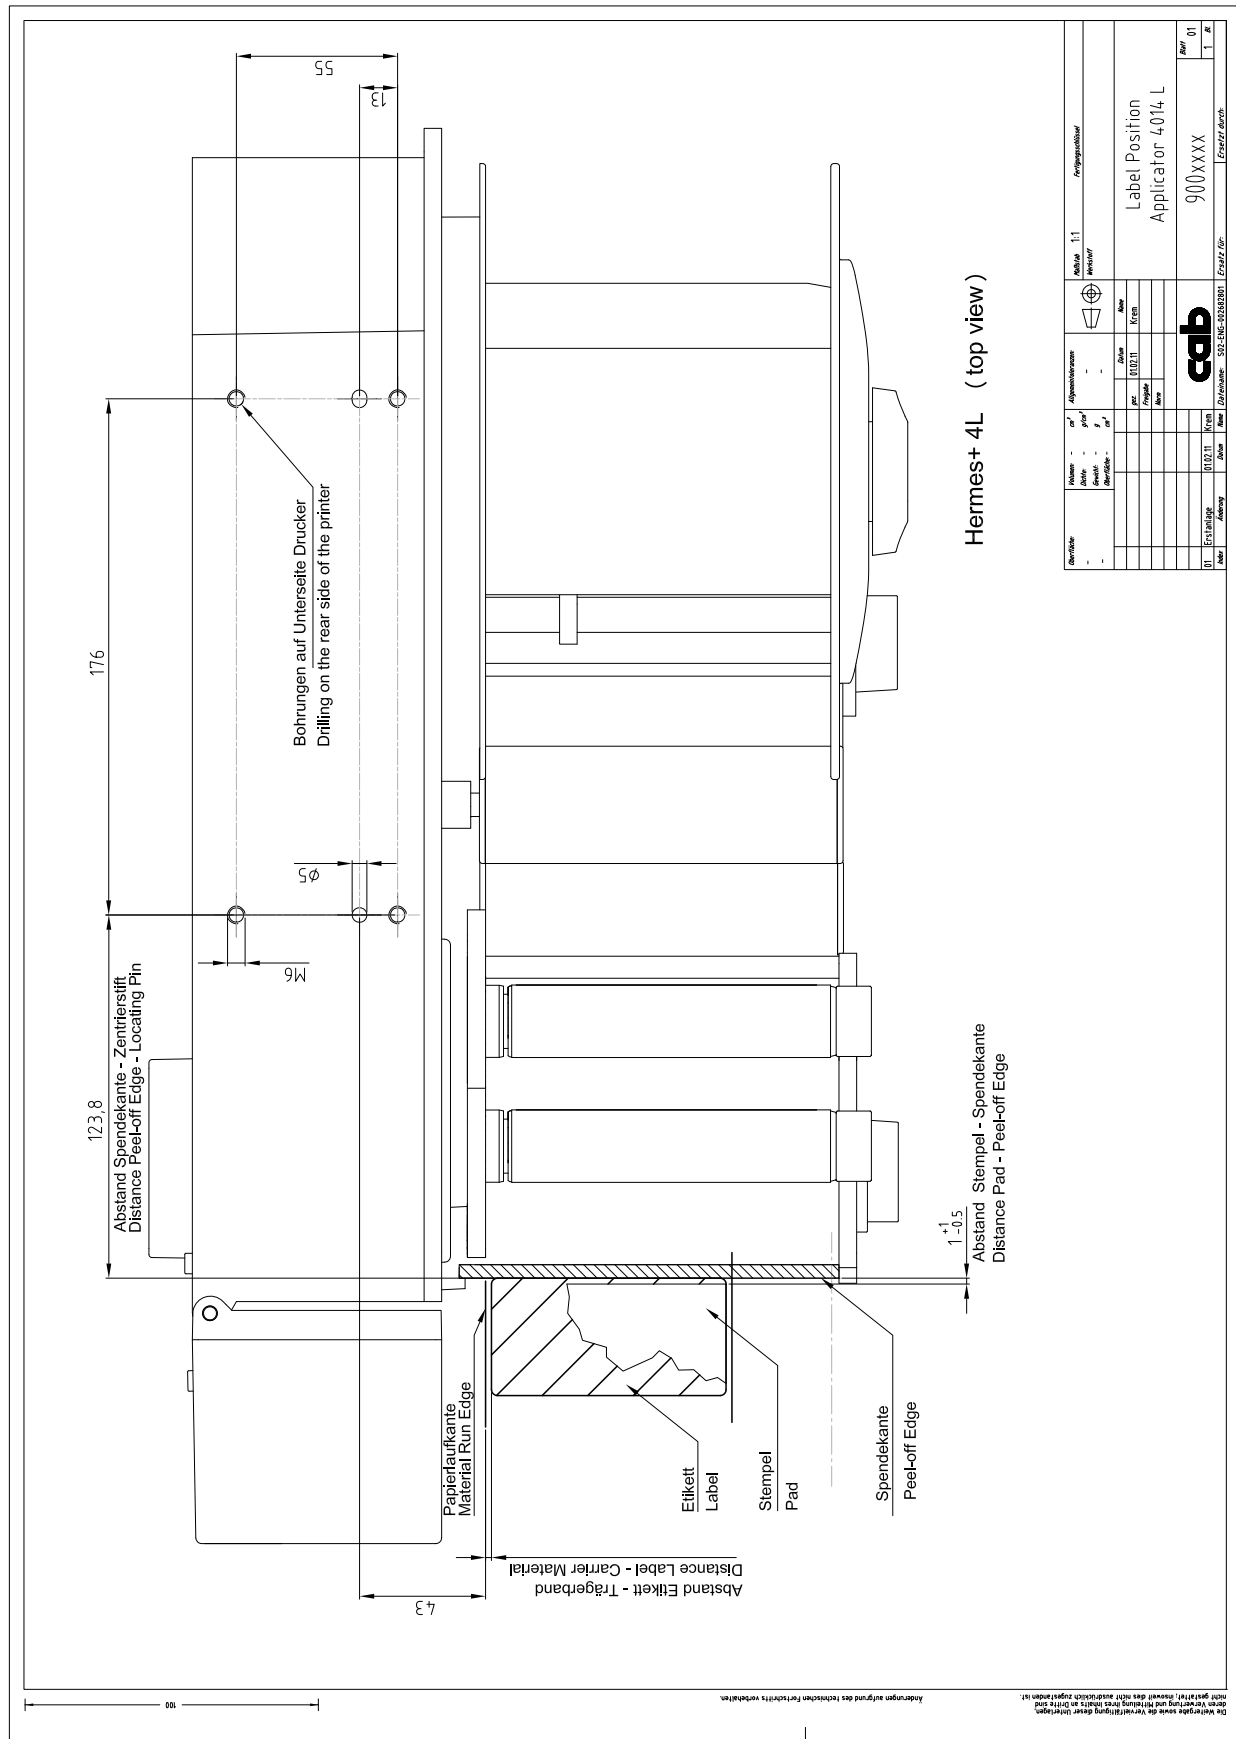

11.4 Label Position Type 4014 R/4016 R

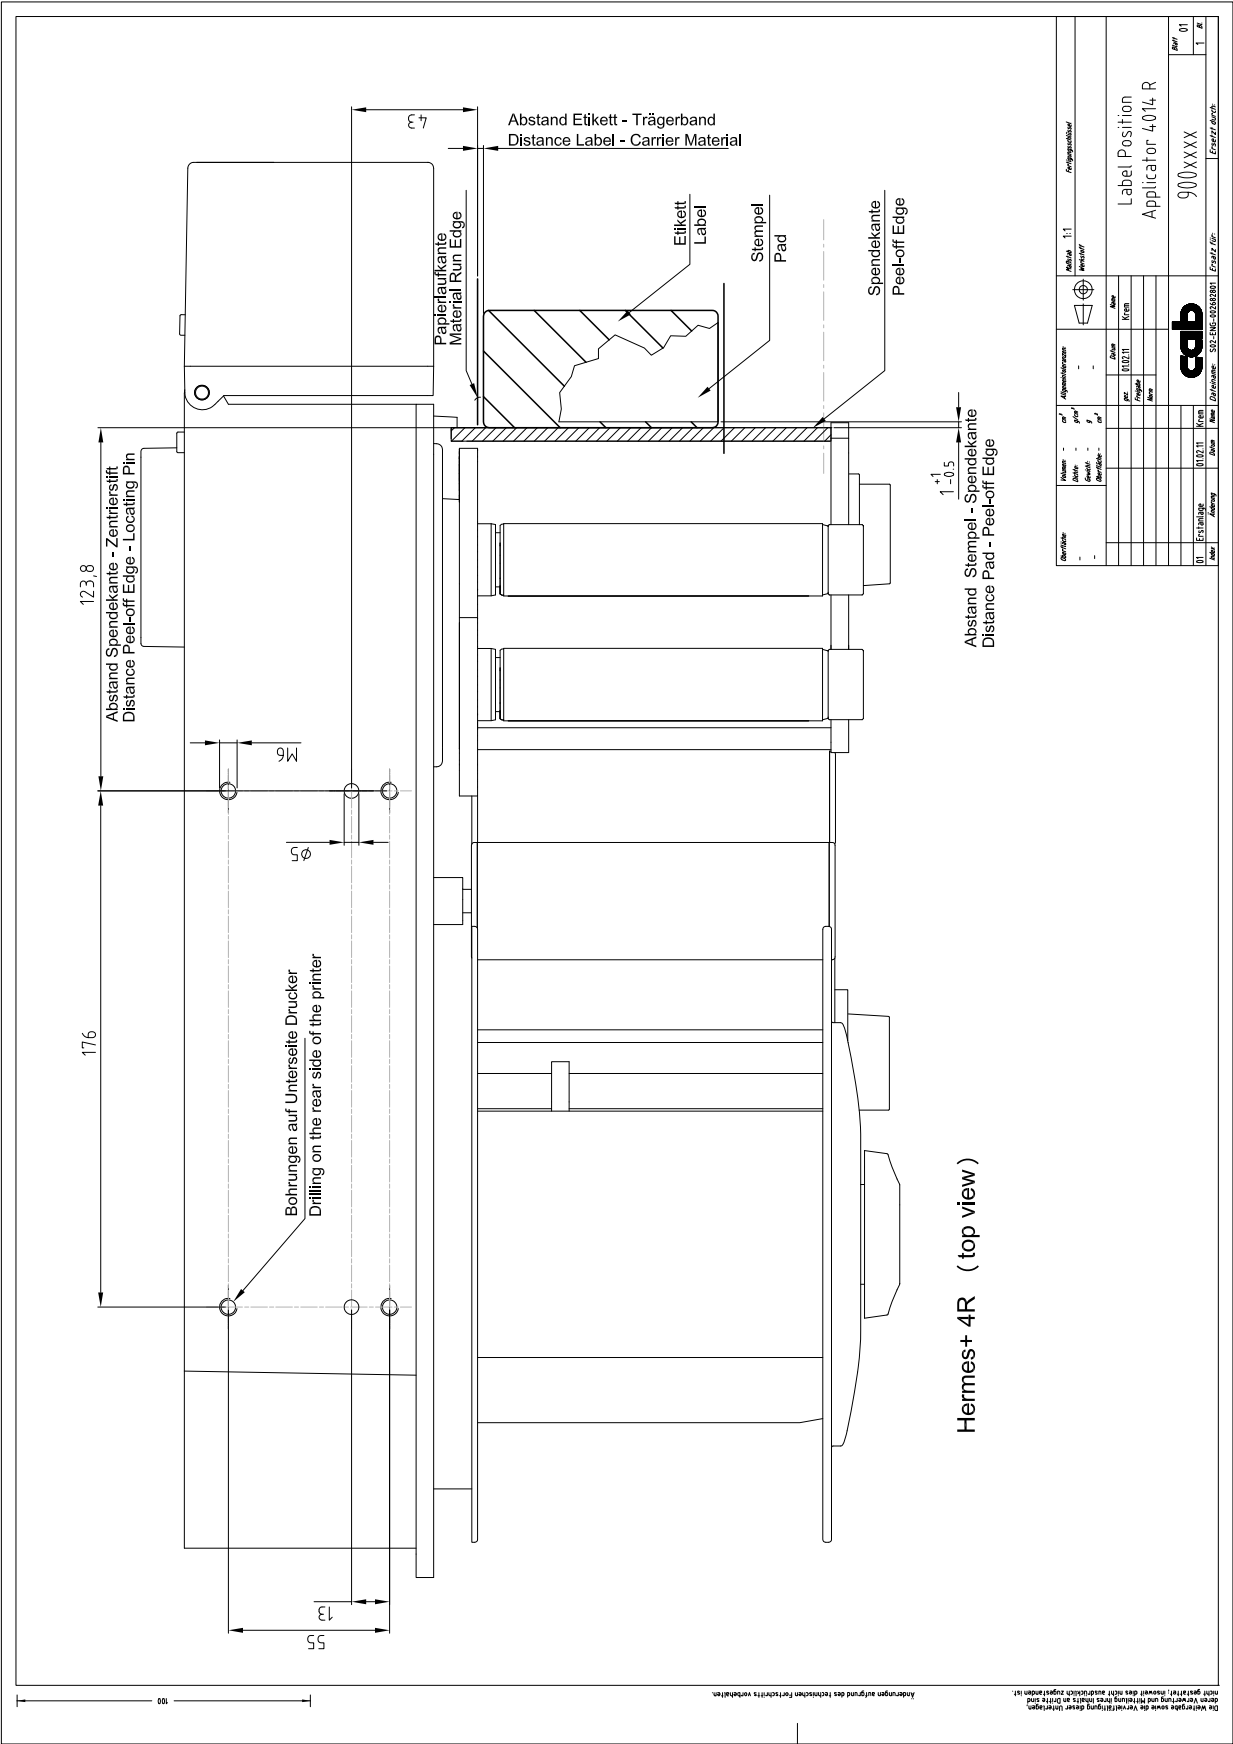


Fig. 49 Label position type 4014/4016 R

A

Applicator Control	40
Applicator Interfaces	40

B

Block Diagram	40
Blow Mode	27
Blow on	31
Blow Tube	21, 25

C

Cleaning	12
Compressed Air	22
Controller	40
Cover	18
Cylinder Assembly	
Guiding (Spare Parts)	38
Cylinder Z	28

D

Declaration of Conformity	16
Declaration of Incorporation	15
Delay Times	31
Delivery	10

E

Electronic Valve Block	40
End Position Cushioning	30
Error Messages	14
EU Regulations	16
Ex Factory	17

F

Features	7
----------------	---

L

Labelling Sensor	29
Label position	
401x L	42
401x R	43
Label Position	42
Level of the cylinder unit	21
Lift Speed	28

M

Moving the tamp	23
-----------------------	----

O

Options	28, 30
---------------	--------

P

Pad	20
Parameters	32
Peel-off Mode	33
Peel position	34
Peel Position	33
Piercing	20
Pneumatic drawing	41
Pressure reduction	30
Pressure reduction valve	30
Printer Setup	31
Print Job	34

R

Reading Point	24
Roll on	31

S

Sensor Start Position	29
Stamp on	31
Support Air	25

T

Tamp pad, spring mounted	21
Test Mode	34
Tools	18
Transport lock	19

U

Universal Tamp Pad	20
--------------------------	----

V

Vacuum	24
--------------	----

X

X-direction	23
-------------------	----

Y

Y-direction	23
-------------------	----

Z

Z-direction	23
-------------------	----