




 


















Hermes+

10 Steps to configurate your labelling system
Configuration Example

Step	Picture	Selection	Ordering Example	
			Art.-No.	Components
1		Printer	5955505	Label printer Hermes+ 4L/300-2
2		Options for printer	xxxxxxx.201	With cover
			xxxxxxx.202	With ribbon saver
			xxxxxxx.203	With cover and ribbon saver
3		Applicator	5966102	4014L-300
4	Configuration tamp pad			
		4.1 Tamp pad	xxxxxxx	Tamp pad 4014L-1110-110x68
		4.2 Blow tube	5964095	Blow pad complete 4"
		4.3 Design and engineering	5535903	Design and engineering pad
5	Option Air pressure supply			
			5955737	Air pressure regulation unit L with main valve
			5918092	Circular connector 3-pin M8
			5918003	Circular connector 4-pin M8
6	Option Mechanical integration			
			5955685	Bracket
			8914443	Clamped joint, profile 50 x 50 mm
			5947400	Stand 1600
7	Option Electrical integration			
			5955712	Product sensor
			5917651	Interface connector SUB-D-plug 25 pin
			5961237.001	Indication light
			5954380.001	External operation panel
			5918008	Patch cable KAT 5e, 3 m grey
8	Option Wearing parts			
			5954072.001	Printhead 4/300
			5954180.001	Print roller DR4
			5961298.001	Pull roller ZR4
9	Option Documentation			
			9008486	Programming manual, English, printed version
10	Option Taking into operation			
			5560010	Taking into operation at cab with customers labels