

Spare Parts List



Air-Jet Box

6114

Made in Germany

2 Spare Parts List for the following products

2

Family	Type
Air-Jet Box	6114 L
	6114 R

Table of Contents

1 Spare Parts.....	3
1.1 Control unit.....	3
1.2 Blow module.....	4
2 Spare Parts Register	5

Edition: 09/2018 - Part No. 9003250

Copyright

This documentation as well as translation hereof are property of cab Produkttechnik GmbH & Co. KG. The replication, conversion, duplication or divulgement of the whole manual or parts of it for other intentions than its original intended purpose - in particular the procurement of spare parts for products sold by cab – demand the previous written authorisation by cab.

Editor

Regarding questions or comments please contact cab Produkttechnik GmbH & Co. KG.

Topicality

Due to the constant further development of our products discrepancies between documentation and product can occur. Please check www.cab.de for the latest update.

Terms and conditions

Deliveries and performances are effected under the “General conditions of sale of cab”

Germany
cab Produkttechnik GmbH & Co KG
Karlsruhe
Phone +49 721 6626 0
www.cab.de

USA
cab Technology, Inc.
Chelmsford, MA
Phone +1 978 250 8321
www.cab.de/us

Taiwan
cab Technology Co., Ltd.
Taipei
Phone +886 (02) 8227 3966
www.cab.de/tw

China
cab (Shanghai) Trading Co., Ltd.
Guangzhou
Phone +86 (020) 2831 7358
www.cab.de/cn

France
cab Technologies S.à.r.l.
Niedermodern
Phone +33 388 722501
www.cab.de/fr

Mexico
cab Technology, Inc.
Juárez
Phone +52 656 682 4301
www.cab.de/es

China
cab (Shanghai) Trading Co., Ltd.
Shanghai
Phone +86 (021) 6236 3161
www.cab.de/cn


South Africa
cab Technology (Pty) Ltd.
Randburg
Phone +27 11 886 3580
www.cab.de/za

1 Spare Parts

1.1 Control unit

No	Part No.	Description	PU	Note	Serial No.	
					from	to
1	5902489.001	Screw DIN7984-M4x8	10			
2.1	5971542.001	Cover	1	L		
2.2	5971949.001	Cover	1	R		
3	5907548.001	Push-in T-Connector	1			
4	5972411.001	Bracket	1			
5	5907547.001	Push-in Connector	1			
6	5905972.001	Push-in Y-Fitting	1			
7	5902009.001	Screw DIN912-M3x12	10			
8	5902838.001	Screw DIN7984-M3x6	10			
9	5984723.001	Clamp	1			
10	5902571.001	Screw DIN7984-M4x6	10			
11	5970242.001	Potentiometer	1			
12	5970246.001	Sensor Adapter	1			
13	5555008.001	Cable	1			
14.1	5966529.001	Hinges	1	L		
14.2	5966531.001	Hinges	1	R		
15	5964090.001	Bar	1			
16	5966530.001	Eccentric	1			
18.1	5984721.001	Base Plate	1	L		
18.2	5984722.001	Base Plate	1	R		
19	5902862.001	Screw DIN7984-M4x20	10			
20	5902167.001	Screw DIN912-M5x50	10			
21	5964318.001	Adapter Profile	1			

No	Part No.	Description	PU	Note	Serial No.	
					from	to
22	5902837.001	Screw DIN7984-M4x8	10			
23.1	5964310.001	Clamping Element	1	L		
23.2	5964328.001	Clamping Element	1	R		
24.1	5964331.001	Crossbeam	1	L		
24.2	5964312.001	Crossbeam	1	R		
25	5964061.001	Setting Screw	1			
26	5903505.001	E-Ring DIN6799-5	10			
27	5964062.001	Binder	1			
28	5984704.001	Adjusting Profile	1			
29	5970241.001	Bracket	1			
30	5905255.001	Push-in L-Connector	1			
31	5907094.001	Magnetic Valve	1			
32.1	5971711.001	Sensor Plate	1	L		
32.2	5971948.001	Sensor Plate	1	R		
33	5970239.001	Holder	1			
34	5970209.001	EEPROM	1			
35	5955575.001	Applicator Control	1			
36.1	5550204.001	PCB Applicator Interfaces	1	L		
36.2	5971418.001	PCB Applicator Interfaces	1	R		
37	5955586.001	Cable	1			
38	5905283.001	Push-in/threaded Fitting	1			
39	5906898.001	One-way Flow Control Valve	1			

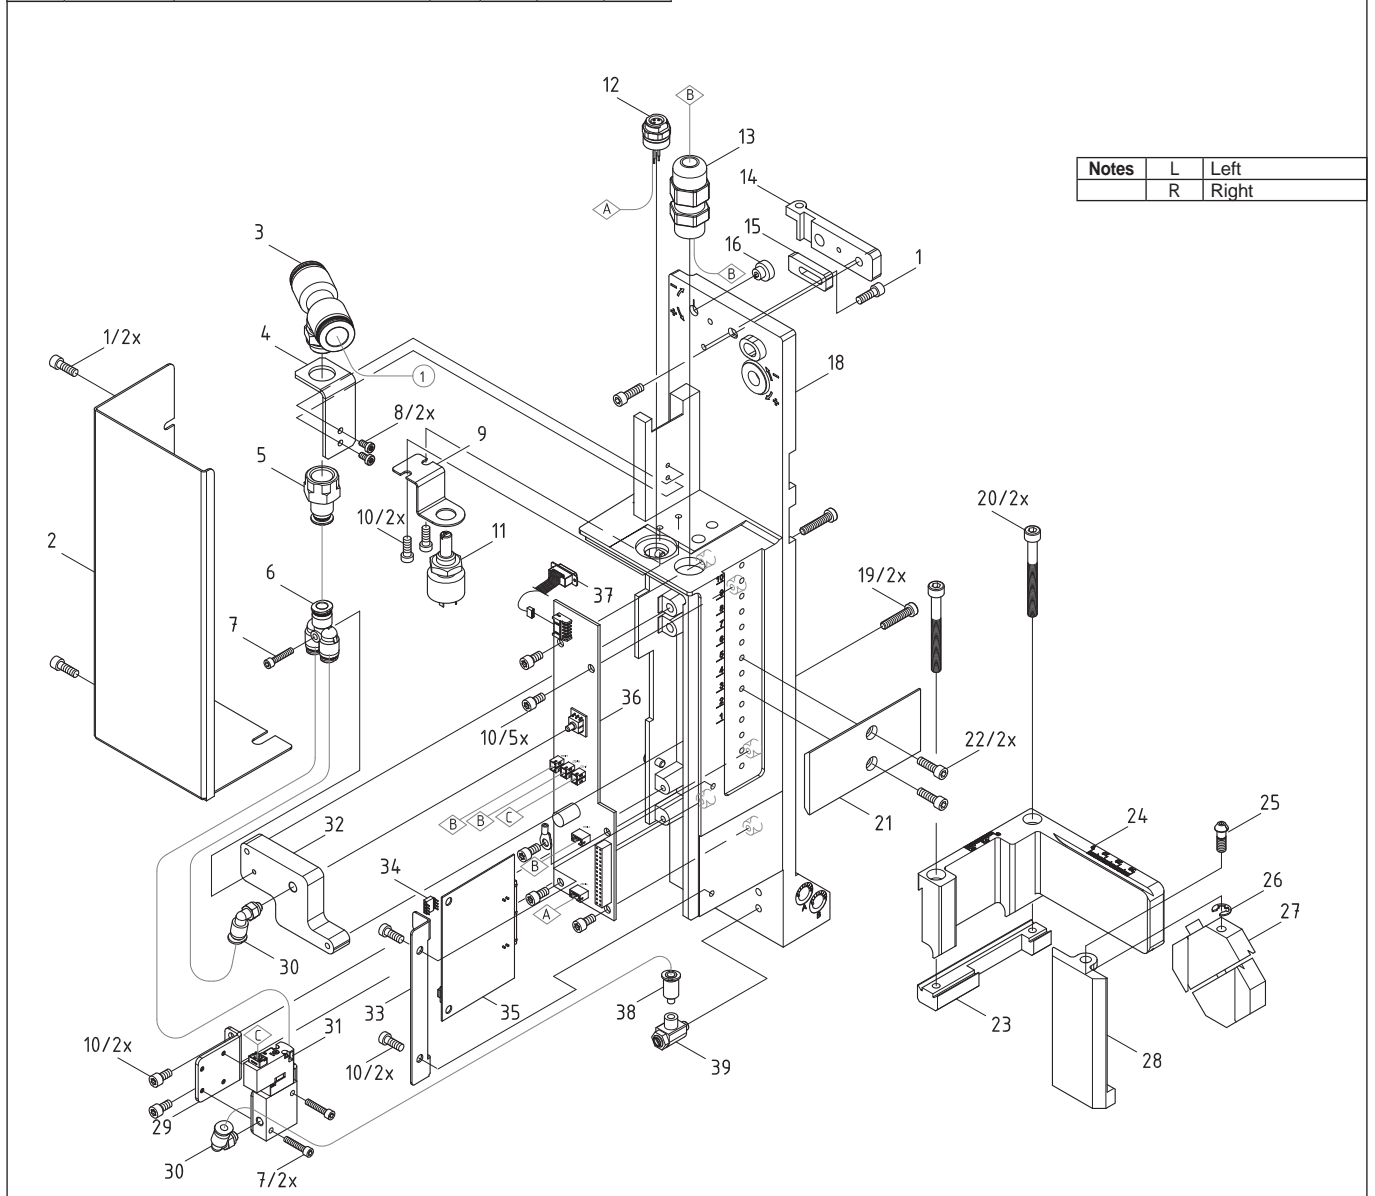


1 Spare Parts

1.2 Blow module

No	Part No.	Description	PU	Note	Serial No.	
					from	to
10	5902571.001	Screw DIN7984-M4x6	10			
13	5555008.001	Cable	1			
40	5984706.001	Bonnet	1			
41	5907328.001	Push-in Connector	1			
42	5984737.001	Bracket	1			
43	5984713.001	PCB Splitter	1			
44	5902890.001	Screw DIN7984 M4x30	10			
45	5971790.001	Fan	1			
46	5902867.001	Screw DIN7984-M3x8	10			
47	5984702.001	Cover	1			
48	5984715.001	Valve	1			
49	5984736.001	Spacer Bushing	1			
50	5984703.001	Screw-in Diffusor	1			
51	5984708.001	Strip	1			
52	5984738.001	Bnlow Assembly	1			
53	5984701.001	Plate	1			
54	5984709.001	Master Plate	1			

Note	L	Left
	R	Right

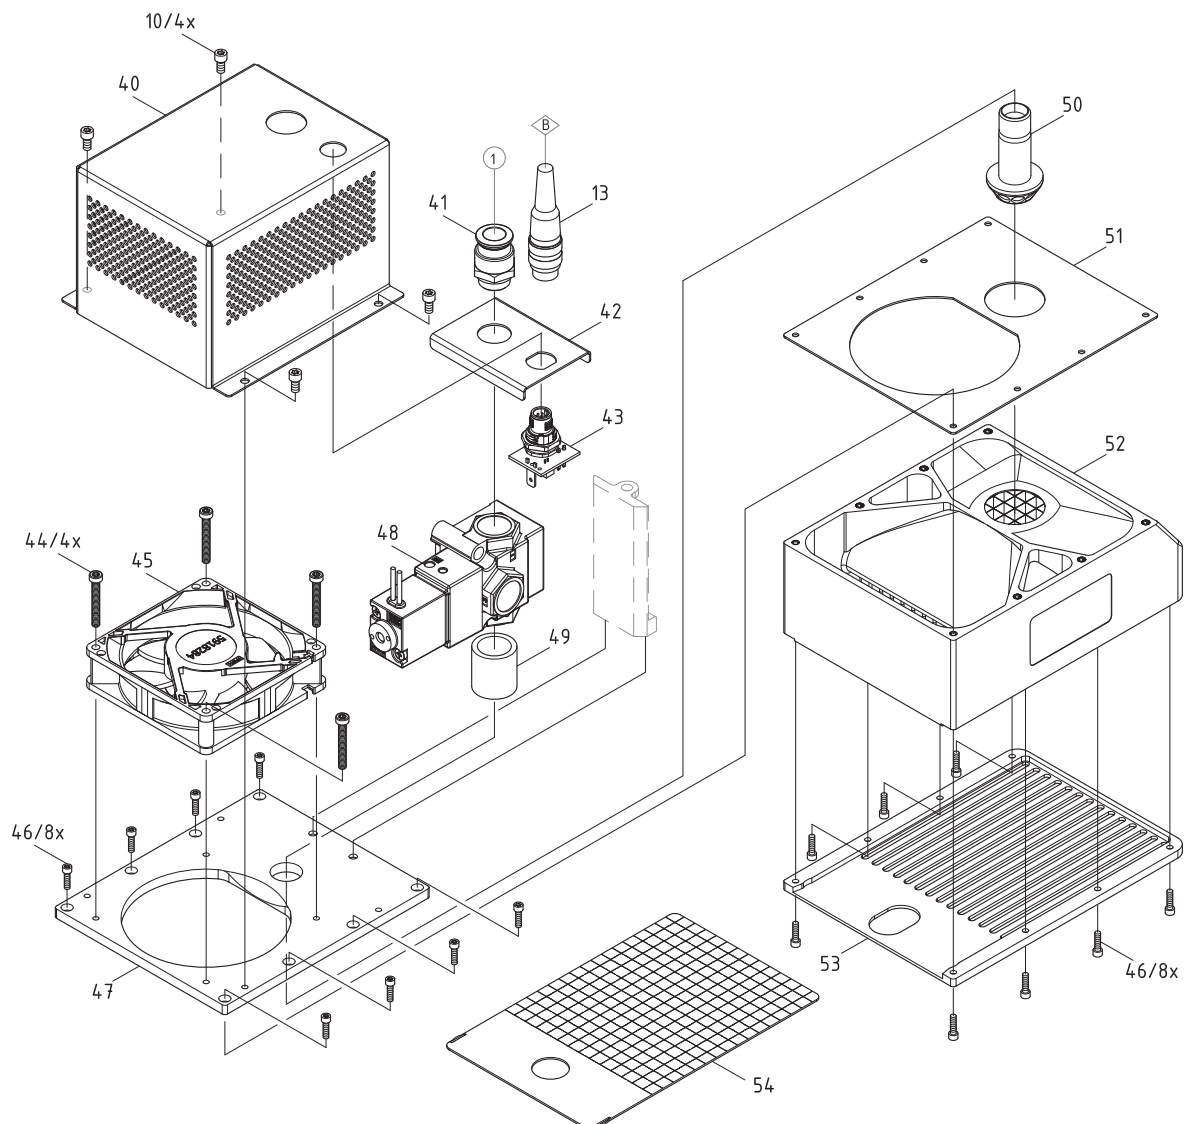

Pos.	Figure/Page		No.	Part No.	Description	PU	SPR				Notes	Serial No.	
												from	to
1	3		36.1	5550204.001	PCB Applicator Interfaces	1			C	D	L		
2	3	4	13	5555008.001	Cable	1			C	D			
3	3		7	5902009.001	Screw DIN912-M3x12	10							
4	3		20	5902167.001	Screw DIN912-M5x50	10							
5	3		1	5902489.001	Screw DIN7984-M4x8	10							
6	3	4	10	5902571.001	Screw DIN7984-M4x6	10							
7	3		22	5902837.001	Screw DIN7984-M4x8	10							
8	3		8	5902838.001	Screw DIN7984-M3x6	10							
9	3		19	5902862.001	Screw DIN7984-M4x20	10							
10		4	46	5902867.001	Screw DIN7984-M3x8	10							
11		4	44	5902890.001	Screw DIN7984 M4x30	10							
12	3		26	5903505.001	E-Ring DIN6799-5	10							
13	3		30	5905255.001	Push-in L-Connector	1							
14	3		38	5905283.001	Push-in/threaded Fitting	1							
15	3		6	5905972.001	Push-in Y-Fitting	1							
16	3		39	5906898.001	One-way Flow Control Valve	1							
17	3		31	5907094.001	Magnetic Valve	1			C	D			
18		4	41	5907328.001	Push-in Connector	1							
19	3		5	5907547.001	Push-in Connector	1							
20	3		3	5907548.001	Push-in T-Connector	1							
21	3		35	5955575.001	Applicator Control	1							
22	3		37	5955586.001	Cable	1							
23	3		25	5964061.001	Setting Screw	1							
24	3		27	5964062.001	Binder	1							
25	3		15	5964090.001	Bar	1							
26	3		23.1	5964310.001	Clamping Element	1					L		
27	3		24.1	5964312.001	Crossbeam	1					R		
28	3		21	5964318.001	Adapter Profile	1							
29	3		23.2	5964328.001	Clamping Element	1					R		
30	3		24.2	5964331.001	Crossbeam	1					L		
31	3		14.1	5966529.001	Hinges	1					L		
32	3		16	5966530.001	Eccentric	1							
33	3		14.2	5966531.001	Hinges	1					R		
34	3		34	5970209.001	EEPROM	1							
35	3		33	5970239.001	Holder	1							
36	3		29	5970241.001	Bracket	1							
37	3		11	5970242.001	Potentiometer	1							
38	3		12	5970246.001	Sensor Adapter	1							
39	3		36.2	5971418.001	PCB Applicator Interfaces	1			C	D			
40	3		2.1	5971542.001	Cover	1					L		
41	3		32.1	5971711.001	Sensor Plate	1					L		
42		4	45	5971790.001	Fan	1			C	D			
43	3		32.2	5971948.001	Sensor Plate	1					R		
44	3		2.2	5971949.001	Cover	1					R		
45	3		4	5972411.001	Bracket	1							
46		4	53	5984701.001	Plate	1							
47		4	47	5984702.001	Cover	1							
48		4	50	5984703.001	Screw-in Diffusor	1							
49	3		28	5984704.001	Adjusting Profile	1							
50		4	40	5984706.001	Bonnet	1							
51		4	51	5984708.001	Strip	1							
52		4	54	5984709.001	Master Plate	1							
53		4	43	5984713.001	PCB Splitter	1			C	D			
54		4	48	5984715.001	Valve	1			C	D			
55	3		18.1	5984721.001	Base Plate	1					L		
56	3		18.2	5984722.001	Base Plate	1					R		
57	3		9	5984723.001	Clamp	1							
58		4	49	5984736.001	Spacer Bushing	1							
59		4	42	5984737.001	Bracket	1							
60		4	52	5984738.001	Blow Assembly	1							

PU Package unit
 Notes L Left
 R Right
 SPR Recommendation
 A - wearing parts and accessories
 B - recommended spare parts for quick repair
 C - recommended spare parts for distributors
 D - recommended spare parts for central stores